www.FANVIL.com

Copyright © 2013, Fanvil Technology Co., Ltd.

This document contains confidential and proprietary information of Fanvil Technology Co., Ltd., henceforth referred to as “FANVIL.” All rights reserved. No part of this documentation may be reproduced in any form or by any means or used to make any derivative work (such as translation, transformation, or adaptation) without written permission from FANVIL Technology Co., Ltd.

FANVIL reserves the right to revise this document, and to make changes therein, from time to time without providing notification of such revision or change.

This document contains descriptive information regarding the subject matter herein, and is not an offer to purchase or license any products or services of, or from FANVIL. FANVIL expressly disclaims any and all representations or warranties, expressed or implied herein, including but not limited to warranties of merchantability or fitness for a particular purpose. The licensing or sale of any product or service by or of FANVIL shall only be made in accordance with, and subject to the terms of, an agreement for the relevant product or service, to be signed by both the customer and FANVIL or its authorized agent or representative. Consequently, FANVIL shall carry no liability to any such customer based on this document, the information contained herein, or the omission of any other information.

Trademarks

The name “FANVIL” is a registered trademark of Fanvil Technology Co., Ltd.

Any other trademarks, trade names, service marks or service names owned or registered by any other company and used herein are the property of their respective owners.

FANVIL Technology Co., Ltd.

Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park,

Qianjin 1 Road, 35th District Bao'An, Shenzhen, 518101 P.R.China.

Tel: +86 755 2640 2199

Web site	http://www.fanvil.com
Email	support@fanvil.com

Table of Contents

Functionality..... 6
Main Capabilities..... 6
Topology 1 - Fanvil D100 via SIP PBX..... 8
Topology 2 - Fanvil D100 via PBX and Direct Connectivity..... 9
Topology 3 - Direct Interaction with Fanvil D100..... 10
Topology 4 - Connectivity with External Networks..... 11
Topology 5 - NAT Traversal Capabilities with Fanvil D100..... 12
Topology 6 - Connectivity with Remote Endpoints..... 13
Description..... 14
System Physical Interface..... 14
- Buttons..... 14
- LEDs 15
- I/O Ports..... 15

Overview..... 18
Login..... 18
Main Menu..... 19
User Management..... 20
- Creating a New User..... 20
- Modifying User Information..... 21
- Deleting a User..... 21

System Parameter Settings..... 21
- Configuring Network Settings..... 21
- SIP Configuration..... 24
- Configuring Access Numbers 28
- Date and Time..... 31

Maintenance..... 32
- Start Diagnostic Trace..... 33

Upgrade..... 33
Summary..... 36
Conference Settings..... 37
- Opening the Conference Settings Window..... 37
- Creating a Conference..... 37
- Other Conference Actions..... 38

Conferencing Parameters..... 39
Content Sharing..... 40

Dialing Options 41
Leader's Capabilities..... 43
Leader Login..... 43
Main Screen..... 44
Layouts..... 46
Show Statistics..... 46
Invite Participants..... 47
Overview..... 48
Topologies..... 48
Fanvil D100 in a DMZ 48
Fanvil D100 behind a NAT..... 49
Firewall/NAT Settings..... 49
Blocking Ports..... 49
Enabling SIP Sessions..... 49
RTP Traffic Ports Range..... 50
NAT Traversal in Fanvil D100..... 50
Near-End NAT Traversal..... 50
Fanvil D100 Setting for Near-End NAT Traversal 50
Far-End NAT Traversal..... 51
Rack Precautions..... 54
Server Precautions..... 54
System Safety..... 54
Electrical Safety Precautions..... 54
General Safety Precautions..... 55

About This Manual

This manual provides detailed guidance on the use of the Fanvil D100. It includes a description of the product, its functionality, features, configuration, and operation.

Feedback:

Please send your feedback to us at support@fanvil.com to help us improve.

Introduction

Functionality

Fanvil D100 provides SIP-based video/audio conferencing services for SMBs and enterprises. The product is a ready-to-use, stand-alone network appliance. The Fanvil D100's web-based management system offers easy system configuration, conference creation, monitoring and conference control in real time.

Main Capabilities

Fanvil D100 offers the following capabilities:

SIP based: Fanvil D100 is a SIP-based conferencing system.

HD conferencing: D100 offers wideband HD voice and HD video in resolutions of up to 720p.

Mixing: A variety of conferencing devices are bridged by D100's advanced audio/video mixing and adapting capabilities. Participants receive video and audio streams that are adapted to their device's media characteristics - codecs, rates, frame size and resolution.

Video/voice characteristics:

Voice codecs: G711a, G711u, G729, G722.1[1], iLBC, G723

Video codecs: MPEG4, H263, H264

Video resolution: Up to 720p

Conference Management: Conferences can be managed by a leader, or set as automated ad-hoc conference rooms.

Leader Dashboard: The Fanvil D100 "Leader Dashboard", enables conference leaders to manage the conference. Upon logging into the Leader Dashboard, the leader can invite participants, modify conference parameters (such as mute and dominant speaker), and revoke/disconnect participants from the conference and view conference information.

Multiple Access Numbers: Fanvil D100 supports multiple access numbers. The Fanvil D100's access numbers are pre-provisioned, and are dialed by conference participants directly or indirectly via their serving PBX.

Multiple Video Layout Options: Equal-presence and dominant-based layouts are supported in the system. These layouts are modified automatically, when a participant enters or leaves the conference.

VIP Participants: Fanvil D100 allows VIP participants to join a conference without PIN code authentication.

Registration: Fanvil D100 is provisioned for registration as a SIP endpoint in the network. An authentication option is provisioned for each registration process. SIP clients may register to Fanvil D100's built-in SIP registrar.

1This product includes ITU-T G.722.1 (Polycom(R) SirenTM) technology.

NAT Traversal: Fanvil D100 provides near-end and far-end NAT traversal, enabling connectivity between entities (Fanvil D100 / SIP clients) which are behind not-SIP-aware NATs and firewalls.

Content Sharing: Fanvil D100 provides content sharing, originated by a SIP client. In this case the conferencing layout is modified to one large image which contains the content (currently, content sharing works only with AVer room systems).

Topologies

This section describes the network topologies supported by Fanvil D100.

Topology 1 - Fanvil D100 via SIP PBX

As shown below, the participants' connectivity with Fanvil D100 is provided via the PBX that provides SIP registrar services to the users. In order to enhance existing services for multimedia conferencing, the PBX interacts with Fanvil D100 using SIP.

Figure 3: Topology 1 - Fanvil D100 via SIP PBX

1. All SIP endpoints at the enterprise register with the PBX.
2. The PBX supports SIP Signaling
3. The Fanvil D100 registers as an extension or is configured as a trunk in the PBX.
4. Fanvil D100 provides Mixing/Bridging/Switching and signaling interoperability.
5. Voice-only clients can also participate in a video conference, making it a mixed Voice/Video conference.

Topology 2 - Fanvil D100 via PBX and Direct Connectivity

As shown below, the participants join the conference either through Fanvil D100 or the PBX.

Figure 3: Topology 2 - Fanvil D100 via PBX and Direct Connectivity

1. SIP endpoints are registered with the Fanvil D100 internal SIP registrar or the PBX.
2. The PBX supports SIP Signaling
3. The Fanvil D100 registers as an extension or is configured as a trunk in the PBX.
4. SIP endpoints can call through the PBX, Fanvil D100 registrar or directly to the Fanvil D100
5. Fanvil D100 provides Mixing/Bridging/Switching and signaling interoperability.
6. SIP endpoints can also connect directly using direct dialing (without registration)
7. Voice-only clients can also participate in a video conference, making it a mixed Voice/Video conference.

Topology 3 - Direct Interaction with Fanvil D100

As shown below, the participants interact directly with the Fanvil D100, via SIP, to connect to a conference room. The participants' PIN numbers and access codes are pre-provisioned through D100's web-based management system.

Figure 3: Topology 3 - Direct Interaction with Fanvil D100

1. Endpoints may be registered with the Fanvil D100 SIP registrar.
2. SIP endpoints can call through the Fanvil D100 registrar or directly to the Fanvil D100 (without registration).
3. Fanvil D100 provides Mixing/Bridging/Switching and signaling interoperability.
4. Voice-only endpoints can also participate in a video conference, making it a mixed Voice/Video conference.

Topology 4 - Connectivity with External Networks

As shown below, the connectivity between conference participants in an enterprise network and participants on public networks is provided through Fanvil D100.

Figure 3: Topology 4 - Connectivity with External Networks

1. All SIP Endpoints register with the PBX.
2. The PBX supports SIP Signaling.
3. The Fanvil D100 registers as an extension or is configured as a trunk in the PBX.
4. Endpoints can also connect via the external network.
5. Fanvil D100 provides Mixing/Bridging/Switching and signaling interoperability.
6. Voice-only clients can also participate in a video conference, making it a mixed Voice/Video conference.

Topology 5 - NAT Traversal Capabilities with Fanvil D100

As shown below, Fanvil D100 provides NAT Traversal capabilities. The system may be located in a DMZ, with a public or private IP address, or in a LAN with a private address. In the below topology the participants and Fanvil D100 are located in two separate, remote LANs:

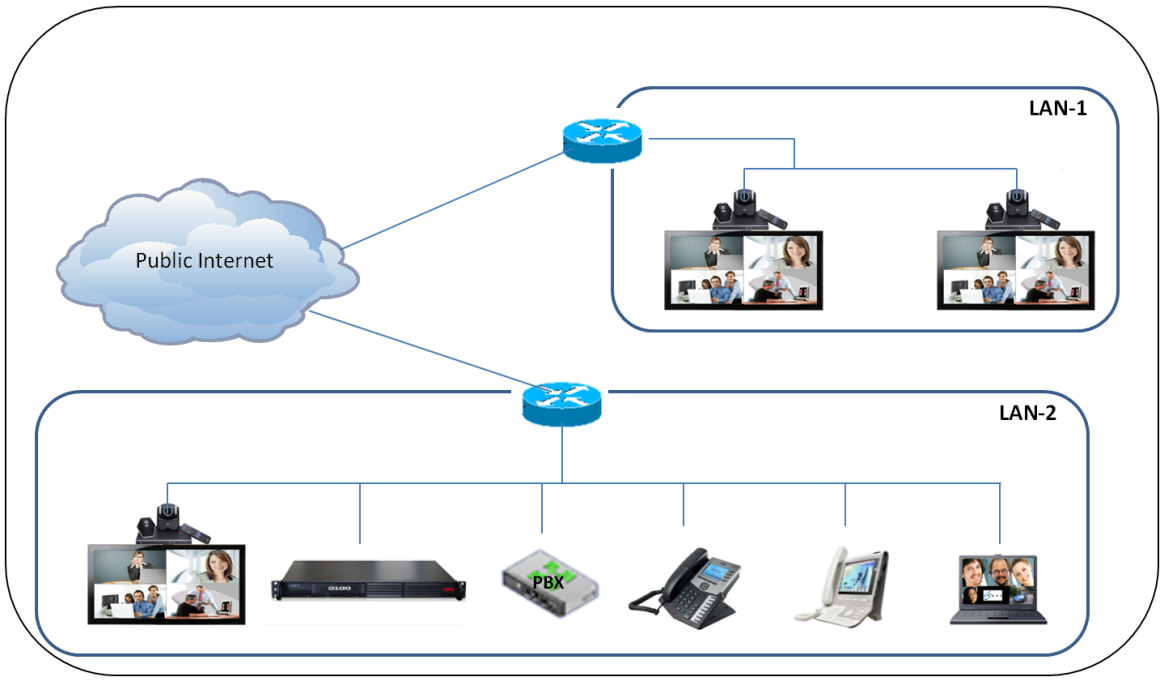

Figure 3: NAT Traversal Capabilities

1. Endpoints can register with the Fanvil D100 SIP registrar or to the PBX
2. Remote office (LAN 1) can be connected to the Fanvil D100 using built-in NAT Traversal capabilities.
3. Fanvil D100 provides mixing/bridging/switching, signaling interoperability and NAT translation.
4. Voice-only endpoints can also participate in a video conference, making it a mixed voice/video conference

Topology 6 - Connectivity with Remote Endpoints

As shown below, Fanvil D100 is located behind a NAT, with a private IP address. The participants interact directly with the Fanvil D100, via SIP, to set and initiate a conferencing session.

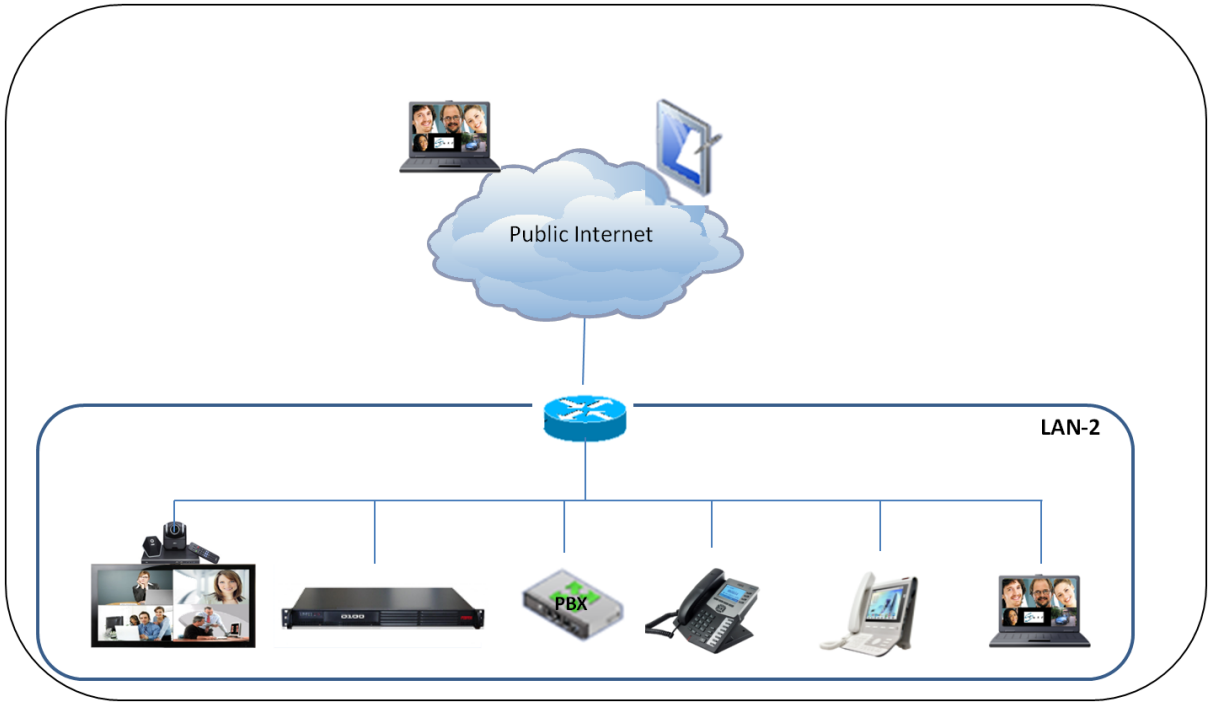

Figure 3: Connectivity with Remote Endpoints

1. All SIP Endpoints at the enterprise register to the PBX or the Fanvil D100
2. The LAN firewall / router must have port forwarding configured to the Fanvil D100
3. Remote employees connect to the conference call by registering with the Fanvil D100.
4. Fanvil D100 provides mixing/bridging/switching, signaling interoperability and NAT translation.

Physical Overview

Description

The front view of the Fanvil D100 is depicted in Error: Reference source not found below.

Figure 4: Fanvil D100 Front View

The Fanvil D100 is available in 2 configurations, supporting both small and large enterprises:

Fanvil D100 1286 – Fanvil D100 1286 is a small-to-medium enterprise-based video/voice conferencing system. Concurrently the system supports up to 2 CIF conferences, or 1 VGA or HD conference, with up to 25 participants (between 5 to 12 are viewable, at each time, depending on the resolution). The system can also support up to 12 concurrent voice conferences.

Fanvil D100 4286* – Fanvil D100 4286 is a medium-to-large enterprise-based video/voice conferencing system. Concurrently the system supports up to 8 CIF conferences, or 4 VGA or HD conferences, with up to 25 participants (between 5 to 12 are viewable, at each time, depending on the resolution). The system can also support up to 20 concurrent voice conferences. *(*General Availability to be confirmed.)*

System Physical Interface

The system physical interface of Fanvil D100 includes panel-based buttons, LEDs and I/O ports.

Buttons

There are two push buttons located on the front of the chassis: a reset button and a power on/off button.

Reset - The Reset button reboots the system.

Power - The Power button is used to turn on and turn off the system. Turning off the system eliminates the main power but maintains standby power. In order to service the system, the server should be shut down and the AC power cord should be unplugged.

LEDs

The five control panel LEDs is located at the front of the chassis and provide information related to different system functions.

Overheat - When this LED is on, it indicates an overheat condition, which may be caused by an obstruction to the airflow or because the room temperature is too high. Check the airflow to the unit. This LED will remain on as long as the indicated condition exists.

NIC2 - Indicates network activity on LAN2 when flashing.

NIC1 - Indicates network activity on LAN1 when flashing.

HDD - Indicates hard drive activity when flashing.

Power - Indicates power is being supplied to the system. This LED is illuminated when the system is operating.

I/O Ports

Error: Reference source not found shows a representation of the Fanvil D100 I/O as they apper on the rear of the chassis.

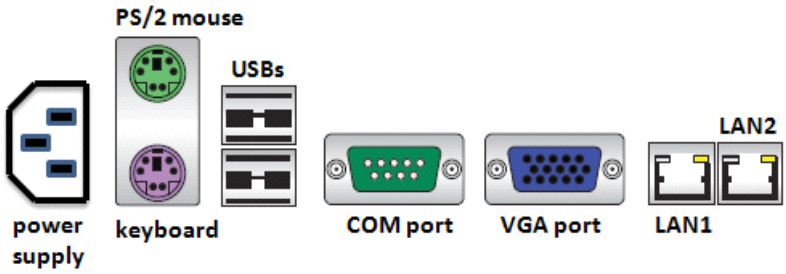

Figure 4: I/O Ports

Getting Started

Step 1: Follow the precautionary and safety instructions

Follow the precautionary and system safety instructions that appear in Appendix A of this User Manual. To install the system, choose a clean, dust-free area that is well ventilated. Avoid areas where heat, electrical noise and electromagnetic fields are generated. If you intend to install the system in a rack, choose a location near a grounded power outlet, and follow the instructions in Appendix B of this User Manual.

Step 2: Unpack your Fanvil D100 system

Step 3: Connect the cables

Connect the cables to your Fanvil D100 system:

1. Connect the short CAT-6 cable that is provided with the system in a loop as shown in Figure 5 below.
2. Connect the Fanvil D100 “LAN” port to the Ethernet port of your computer using a CAT-5/6 cable.
3. Connect the power cable first to the Fanvil D100 and then to the power outlet. Press the power-on button located on the front panel of the Fanvil D100 to start the system. (Server and application load time is approximately 5 minutes).

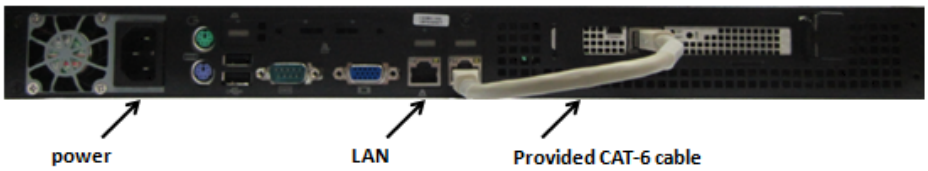

Figure 5: Cable Connectivity

Step 4: Apply the static IP address “192.168.0.2” to your Computer

Change your computer’s network settings and apply the following static IP address: “**192.168.0.2**”.

Step 5: Change Fanvil D100’s IP address

Fanvil D100 is provided with a default IP address “**192.168.0.1**” that should be modified before using the system.

To change the IP address:

In a web browser, navigate to the default IP address - 192.168.0.1. Upon the appearance of the login screen, enter the default user name and password (admin, admin).

Note: *Fanvil D100 web based GUI supports Internet Explorer 8 or newer, Google Chrome 20 or newer, Mozilla Firefox 14 or newer and Safari 5 or newer.*

1. Select **System Settings** > **Network Settings,** as shown in Figure 5 below:

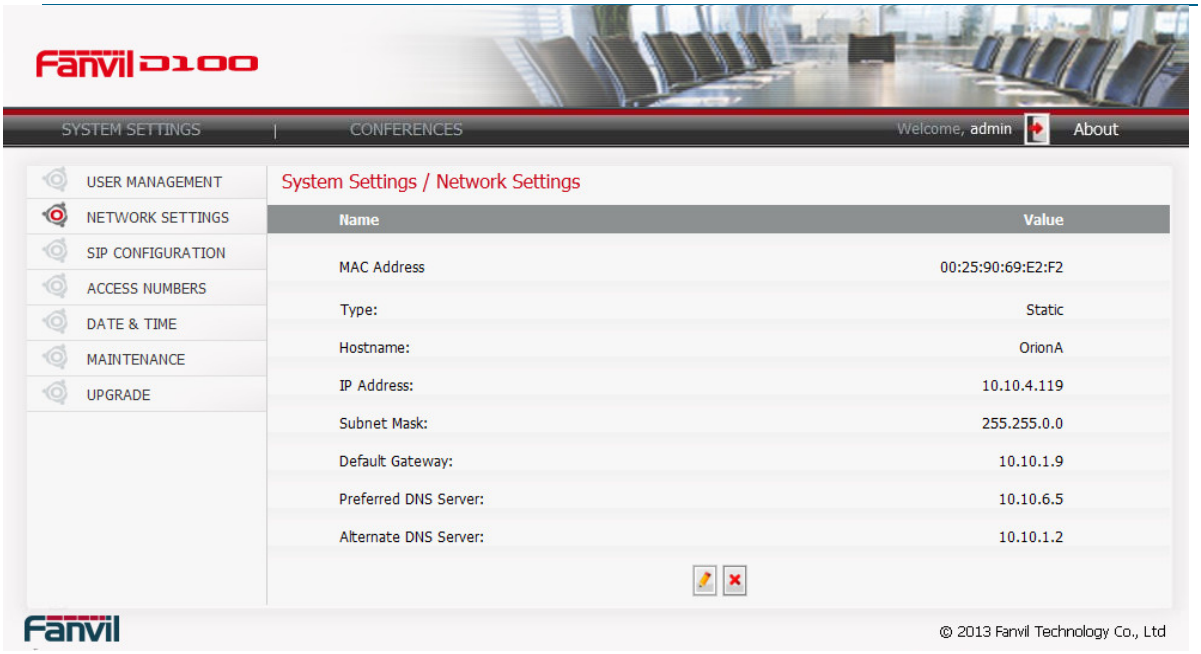

Figure 5: Network Settings Window

Click Edit and then modify the IP Address field.

Click Save . A confirmation message appears, as shown in Figure 5 below:

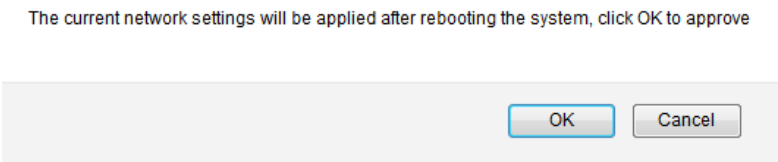

Figure 5 - Network settings confirmation message

Click **OK**.

The system reboots and the changes are applied.

Note: *If* ***DHCP*** *was chosen, the simplest way to see the Fanvil D100 IP Address is to connect a monitor and restart the machine. The IP Address will appear in the Login Screen at the end of the system load.*

Step 6: Connect to the Fanvil D100 IP Address from your Network

Restore the original network configuration on your computer, and connect the Fanvil D100 to your network.

Connect to Fanvil D100 management system by entering the Fanvil D100's IP address in a web browser.

The Fanvil D100 is now connected to your network

Administration and Configuration

Overview

The administration and configuration of the Fanvil D100 are performed using the web-based management system.

After setting up the system – and prior to conference-service creation – the system should be configured according to the steps described in this section.

Login

After entering the Fanvil D100's IP address in your web browser, the **Login** window appears. Enter the default user name and password (**admin, admin**).

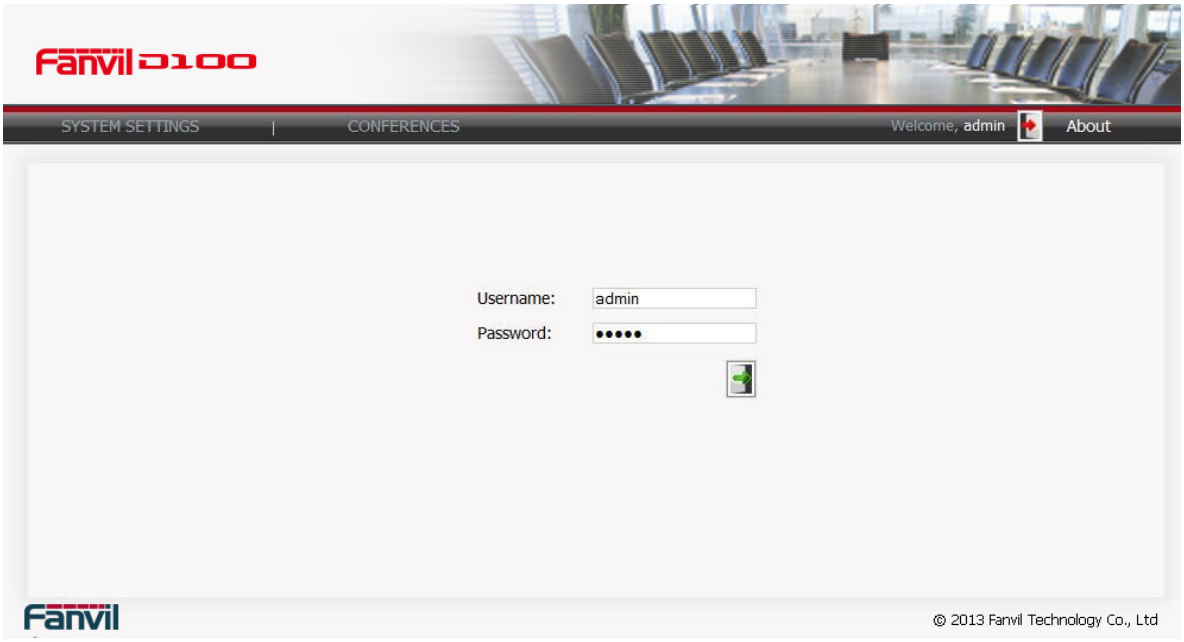

Figure 6: Login Window

***Note**: It is recommended to change the default admin password, before starting to use the system.*

***Note:** The user can choose a language from the system's pre-defined list of languages by using the drop down menu on the top-left side of the screen.*

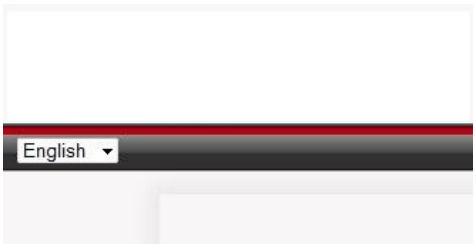

Main Menu

The **Main Menu** window appears when the user has logged in. This window is divided into two main categories:

a) System Settings

b) Conferences

Prior to conference creation, system settings must be configured.

Figure 6: Main Menu Window

***Note**: To log out, click the logout icon (red), at the top-right of the screen*

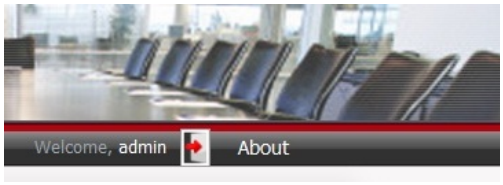

***Note:** To view Fanvil D100 component versions, click **About**, at the top-right of the screen.*

User Management

The **User Management** window allows the administrator to create a new user, update existing user information, or remove a user from the system.

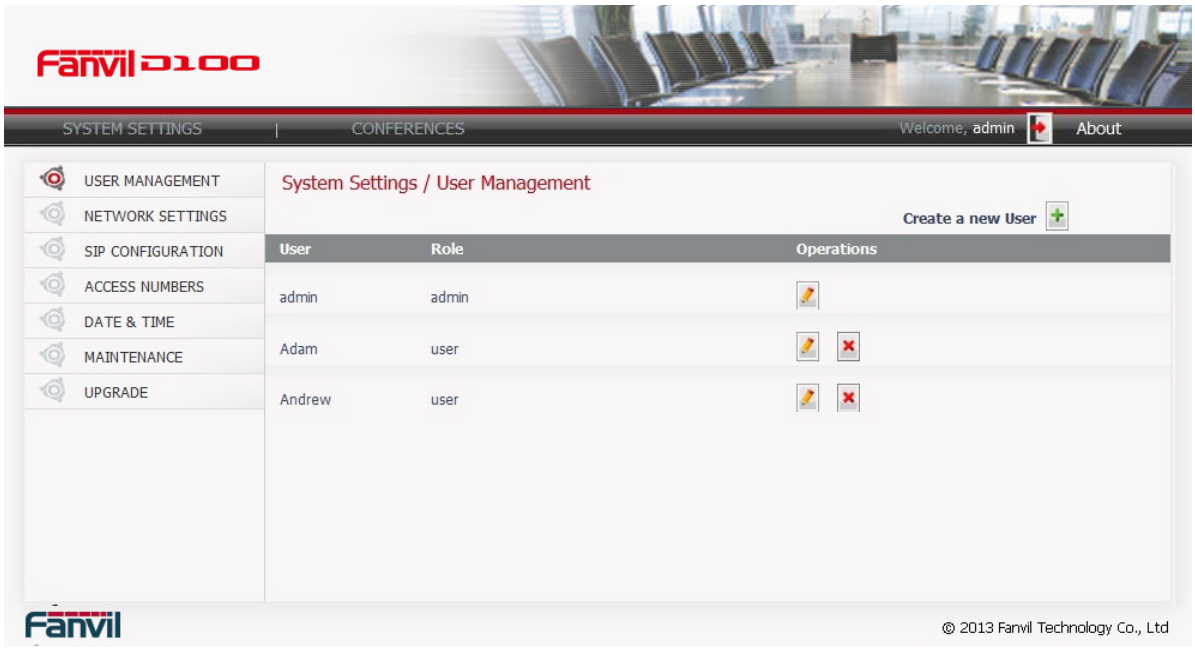

Figure 6: User Management Window

The **User** field lists user names. The **Role** field displays the capabilities of the user in the system. The Role can be either **admin** or **user:**

The **admin** role permits access to all system capabilities.

The **user** role enables only conference creation, viewing, and modification of conference information.

Creating a New User

To create a new user:

1. In the **System Settings > User Management** window, click on **Create a new User** button. The **Create a new User** window opens:

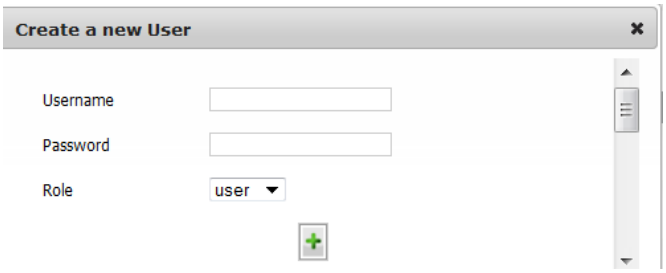

1. **Figure 6: Create a New User Window**

2. Select a **Role** for the user.

3. Click to add the new user to the system.

Modifying User Information

To modify user information:

1. In the **System Settings > User Management** window, click Edit in the **Operations** column of the user to be edited.

   The Edit User window opens.

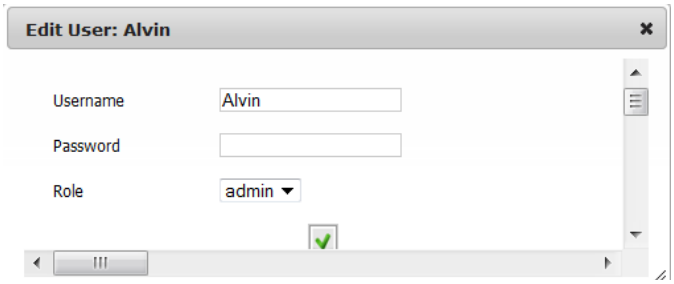

Figure 6: Edit User Window

2. Modify the information as needed and click **Save** .

Deleting a User

To delete a user from the system:

In the System Settings/User Management window, click **Delete** in the **Operations** column of the user to be removed.

System Parameter Settings

Before creating a conference, the network and SIP parameters must be provisioned.

Configuring Network Settings

Network settings are configured in the **Network Settings** window, as shown in Figure 6 below.

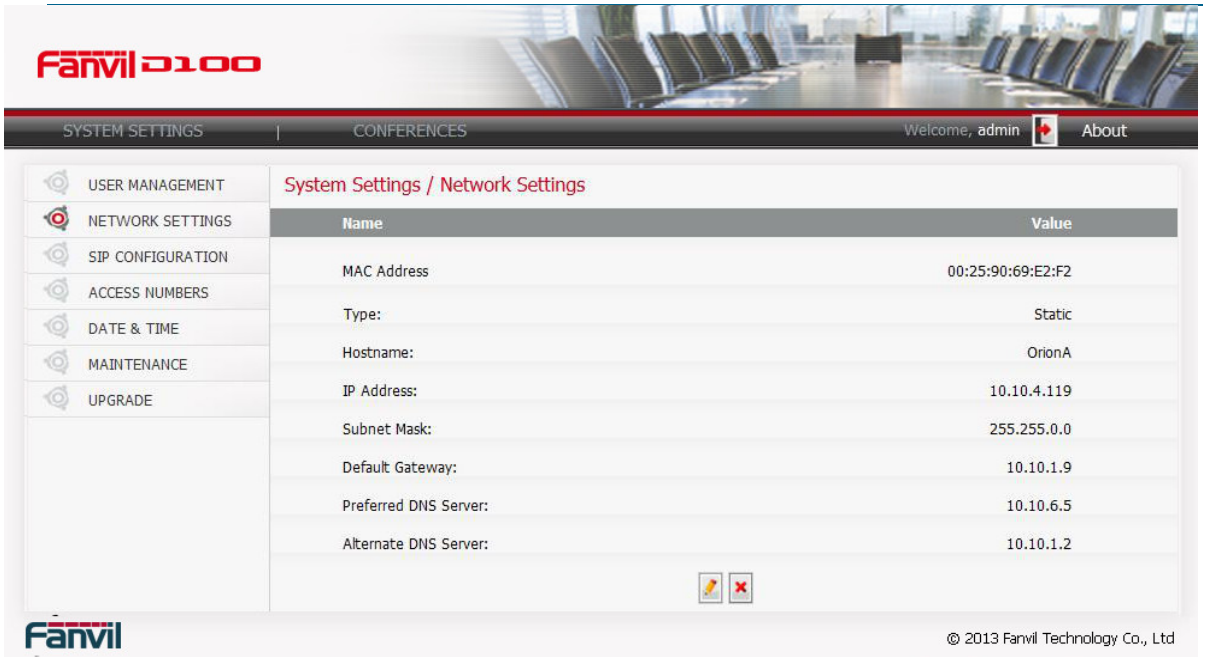

Figure 6: Network Settings Window

To configure network settings:

1. Select **System Settings** > **Network Settings**.

   Click **Edit**. Network parameters become editable.

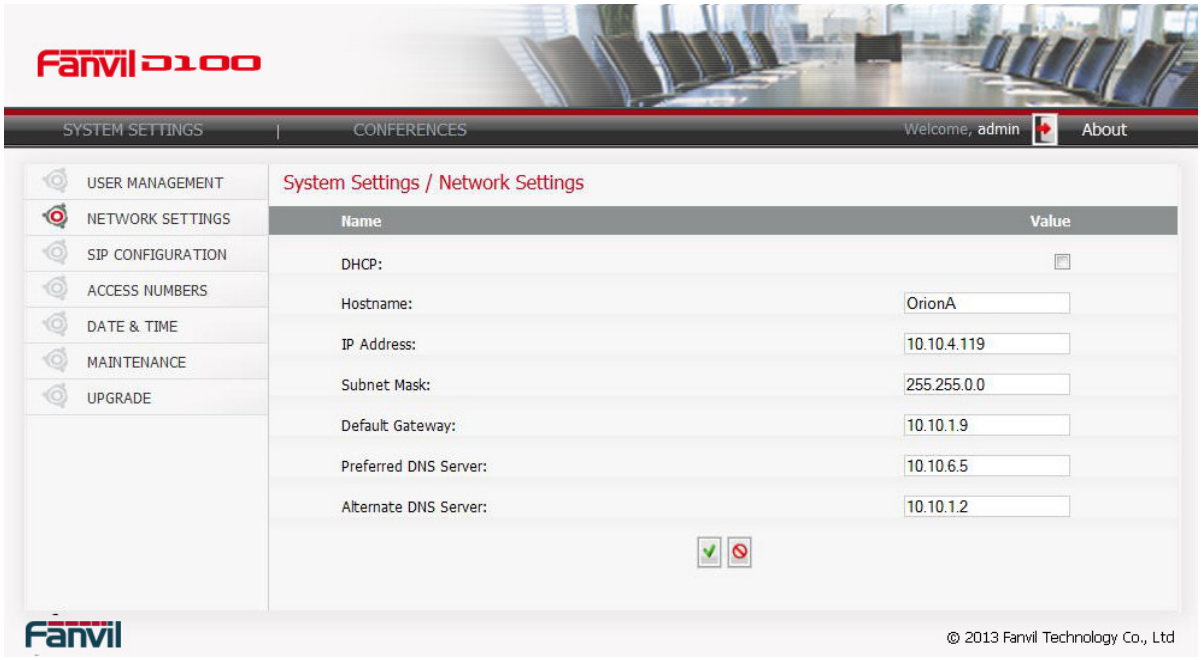

Figure 6: Network Settings Editing

***Note**: If the **DHCP** parameter is selected, then only the Hostname parameter can be edited. All other network parameters are grayed out.*

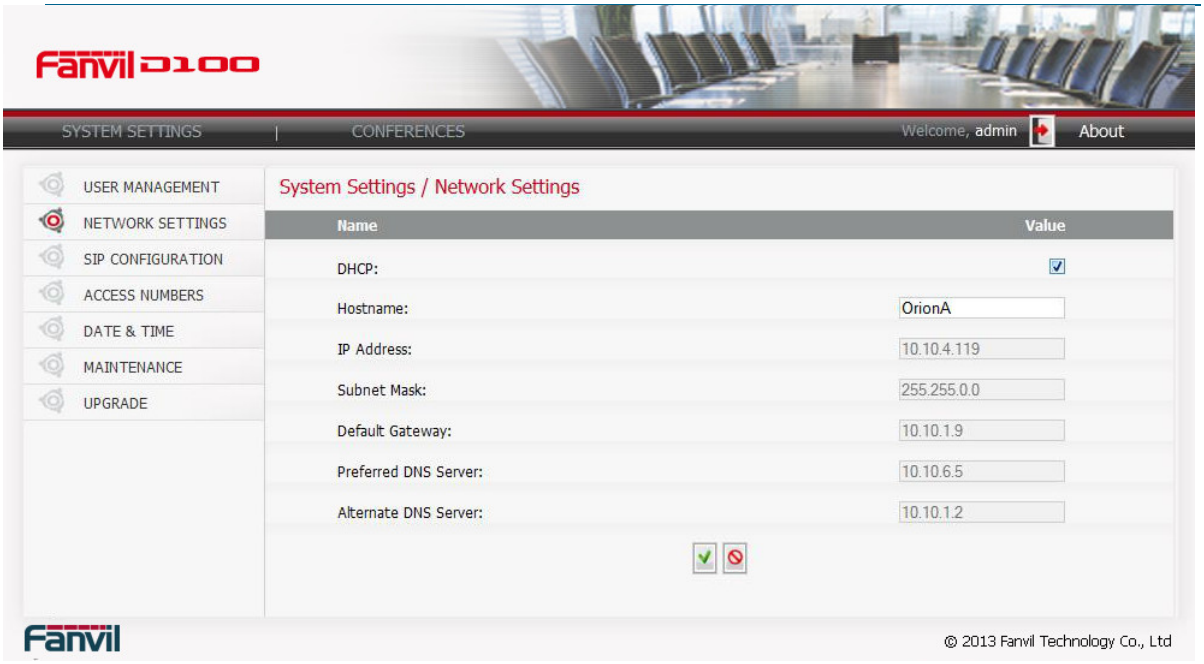

Figure 6: Network Setting Window

2. Edit the network parameters, as needed, according to the following table:

Parameter	Definition	Description
Hostname	String	The name of the Fanvil D100 system in your network. It's highly important to configure the **Hostname** as defined in the DNS of the LAN or the WAN where the Fanvil D100 is deployed. Fanvil D100 is using the hostname value in SIP calls with emphsis on NAT Traversal scenarios. Example: D1001.D100mcu.com
IP Address	IP address	The Fanvil D100 system's IP Address
Subnet Mask	Net-mask	The Fanvil D100 system's subnet mask
Default Gateway	IP address	The IP Address of the default gateway
Preferred DNS Server	IP address	The IP Address of the preferred DNS Server
Alternate DNS Server	IP address	The IP Address of the alternate DNS Server

Table 6: Network Parameters

Note: *DNS definition is highly important for system upgrades and SIP calls with domain names involved.*

3. To revert to the previous values, click **Revert**.

4. Click **Save** to save the configuration.

A message appears, requesting confirmation to restart the system. The changes are applied upon restarting the system.

SIP Configuration

SIP parameters are configured in the **SIP Configuration** window, as shown in Figure 6 below.

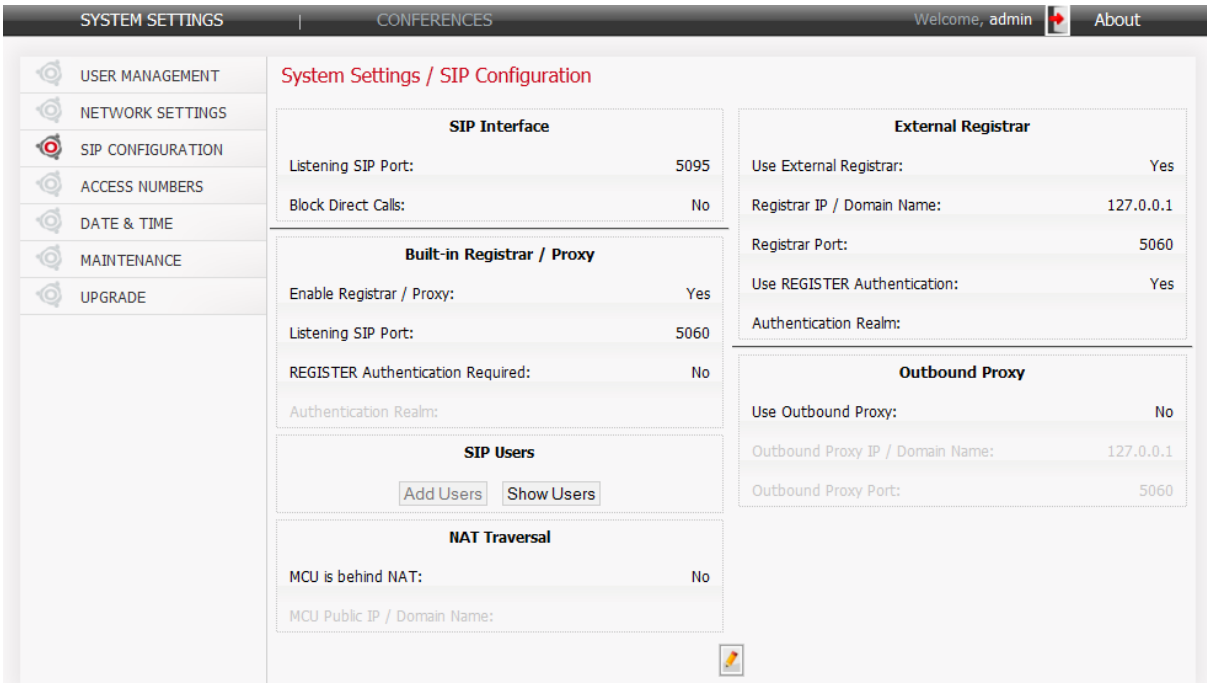

Figure 6: SIP Configuration

To configure SIP Settings:

1. Select **System Settings > SIP Configuration**.
2. Click **Edit**. The SIP settings become editable.

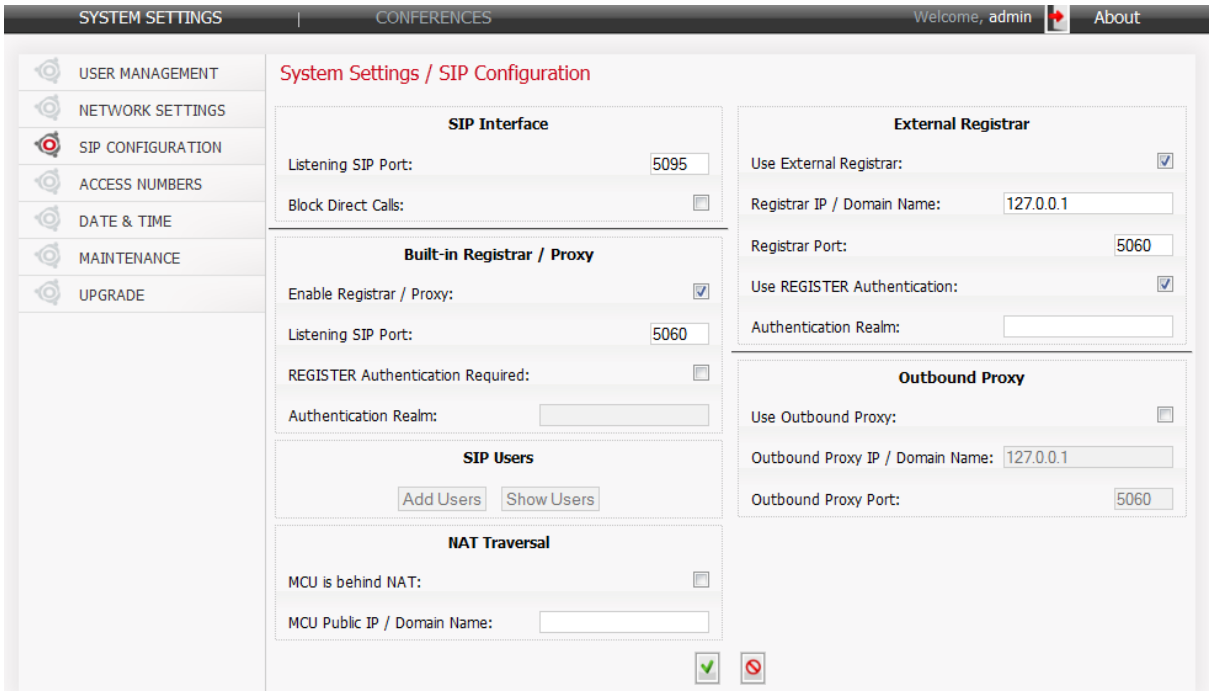

Figure 6: SIP Parameters Editing

3. Edit the SIP parameters. The SIP parameters are described in the following tables:

SIP Interface

Parameter	Values	Description
Listening SIP Port	Port	This parameter provides an additional SIP port for SIP interactions between Fanvil D100 and external entities. The external entities can be SIP UAs like SIP PBXs, or non-registered SIP clients. SIP clients cannot register to Fanvil D100 through this port, to register with Fanvil D100 the Listening SIP Port of the Built-in Registrar / Proxy should be used.
Block Direct Calls	Check-box (Yes/No)	If this box is checked, direct incoming calls through “SIP Listening Port” (see above), will be blocked.

Table 6: SIP Interface Settings

Built-in Registrar / Proxy

Parameter	Values	Description
Enable Registrar / Proxy	Check-box (Yes/No)	If this box is checked then Fanvil D100 can be used as a registrar for SIP clients.
Listening SIP Port	Port	This is Fanvil D100’s built-in listening SIP port, used for registration of SIP clients and session establishments. It is applicable only if “Enable Registrar / Proxy” (above) check-box has been set.
REGISTER Authenticate Required	Check-box (Yes/No)	“REGISTER Authenticate Required” is a check box that determines the authentication of the managed users to Fanvil D100. Managed users are users that are provisioned in the system. If the box is checked, non-managed users are *not* allowed to register with the system
Authentication Realm	String	Authentication realm of Fanvil D100 built-in Registrar for REGSITER digest challenge, any string can be used.
SIP Users		
Add Users		Used to add new users to the system. This function is applicable only when “Enable Registrar Proxy” and “REGISTER Authenticate Required” check-boxes have been checked. For more details, please refer to “Add Users”, section Add Users below.
Show Users		Used to display the system’s users. This function is applicable only when “Enable Registrar / Proxy” check-box has been set. For more details, please refer to “Show Users”, section below below.
NAT Traversal		
MCU is behind NAT	Check-box (Yes/No)	States whether the MCU is behind a NAT.
MCU Public IP / Domain Name	IP address	SIP public IP address or domain name, used for near-end NAT traversal (see section Near-End NAT Traversal below). NAT Traversal is not applicable for sessions which use **SIP Interface: SIP Listening Port** (see Table 6-2 above).

Table 6: Built-in Registrar Settings

External Registrar

Parameter	Values	Description
Use External Registrar	Check-box (Yes/No)	If an external registrar is configured, Fanvil D100 registers access numbers and conference rooms to the external registrar.
Registrar IP/ Domain Name	IP address	The external registrar IP address or domain name
Registrar Port	Port	The external registrar SIP port

Use REGISTER Authentication	Check-box (Yes/No)	Indicates whether the registration requires authentication.
Authentication Realm	String	The Authentication realm of the External Registrar Must be the value sent in 401 response to REGISTER messages (Authentication is supported for REGISTER only).

Table 6: External Registrar Settings

Outbound Proxy

Parameter	Values	Description
Use Outbound Proxy Server	Check-box (Yes/No)	States whether an outbound proxy server is used. In case that the Fanvil D100 is behind NAT or configured with public IP, and NAT traversal (Near or Far end) is provided by Fanvil D100, the Outbound proxy server **should not** be configured.
Outbound Proxy Server IP	IP address	The Outbound proxy server IP address.
Outbound Proxy Server Port	Port	The Outbound proxy server port

Table 6: Outbound Proxy Settings

4. To revert to the previous values, click Cancel.
5. Click **Save** to save the configuration.

   If any SIP parameter has been modified, then all the active calls will be dropped and the application will restart. In this case the user's confirmation is required:

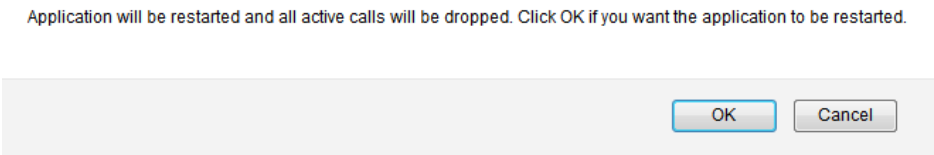
Application will be restarted and all active calls will be dropped. Click OK if you want the application to be restarted.
OK
Cancel

9. Click **OK**.

   The application restarts, and the new configuration is applied.

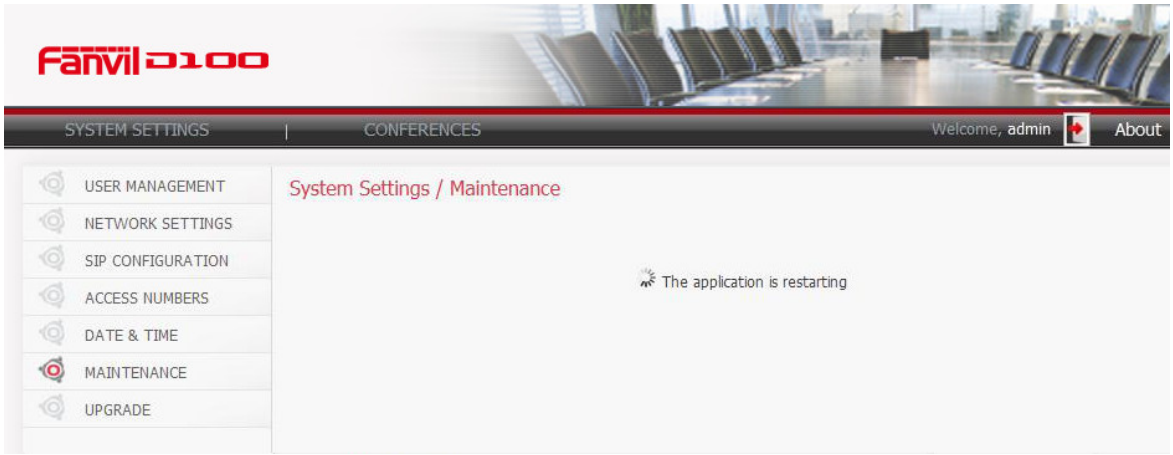

Figure 6: Restart After SIP Settings

Add Users

To add a new SIP user to the SIP Built-in Registrar, the **Enable Registrar Proxy** and **REGISTER Authenticate Required** check-boxes must be enabled.

If these parameters are not enabled, enable them and click on **Save**, before moving forward. The system shall restart and the changes shall be applied.

To add a new SIP user:

1. Click the **Add Users** button, the following window appears:

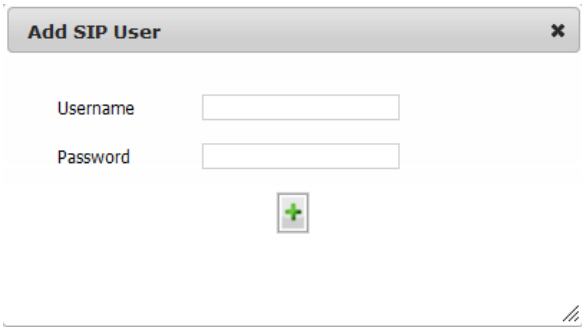

Figure 6: Adding SIP User

2. Enter the **Username** and the **Password** of the SIP User
3. Click on to confirm the action.

   A new user has been added to the system.

Show Users

You can view the Fanvil D100's SIP users.

To view the users:

Click the **Show Users** button. The following window is displayed:

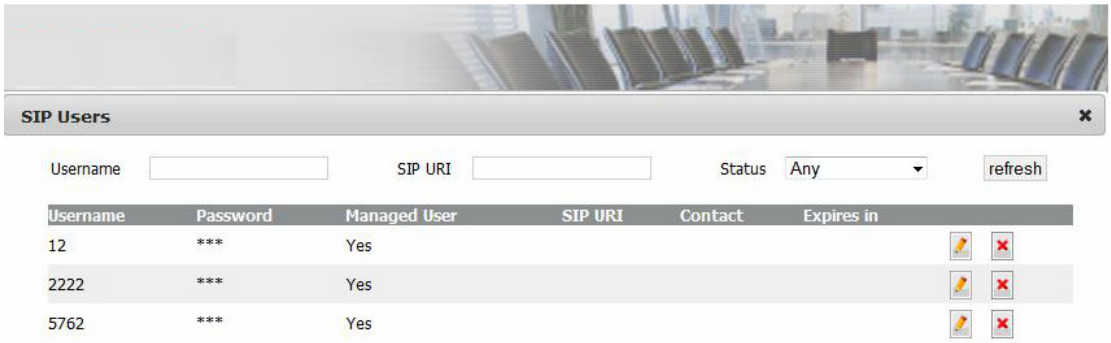

Figure 6: Show Users Window

The columns on this screen can be sorted in ascending or descending order by clicking on any of the column headers.

Filtering the Displayed List

The user is enabled to filter the displayed list, using the toolbar at the top of the table:

Filtering criterias are as follows:

Username. Type a full **Username** or a partial string from it.

SIP URI. Type a full **SIP URI** or a partial string of it.

Status. Choose **Any**, **Registered** and **NON-Registered** options, to see all the users, registered or non-registered users accordingly, using the drop-down menu.

Pressing on **Refresh** resets the filter and the original list re-appears on the screen.

Managed Users

Managed Users are users that are provisioned in the system. **Non-Managed Users** are users which are not provisioned in the system. Non-Managed users are allowed to register to use the system only if the **REGISTER Authentication Required** parameter is not set.

Operations

To delete a user click on . A dialog-box pop-up for user's confirmation.

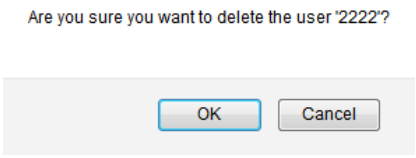

To modify a user's **password:**

1. Click on the following window opens:

2. Enter the new password.
3. Click on the **Save** button.

Configuring Access Numbers

An access number is a number which a participant dials to connect with the Fanvil D100. An IVVR directs the user to enter the conference number and the PIN code. However, access numbers are not mandatory, since a participant can also join a conference by dialing directly the conference number.

A single Fanvil D100 supports multiple access numbers. The access numbers are provisioned via the Fanvil D100 GUI, as shown in this section. If the number dialed by a participant does not match any of the provisioned access numbers (or conference numbers), the call is declined.

To configure access numbers:

1. Select **System Settings** > **Access Numbers**. The Access Numbers window opens:

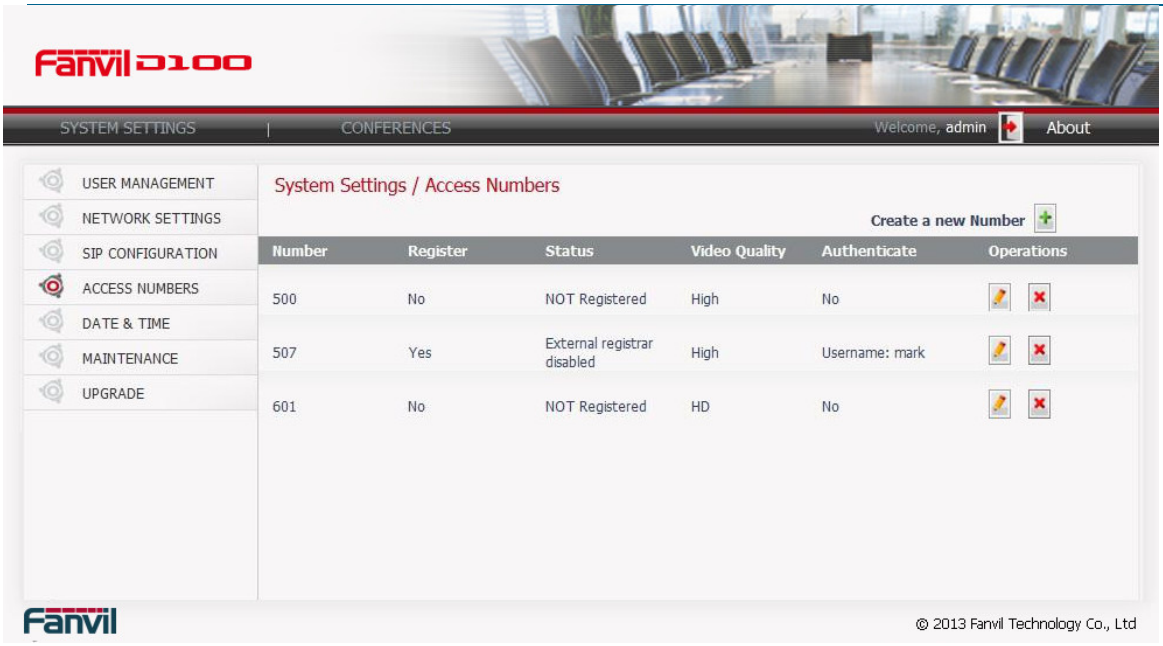

Figure 6: Access Numbers Provisioning

1. Click **Create**, for a new Number.

   The **Create a new Number** window opens.

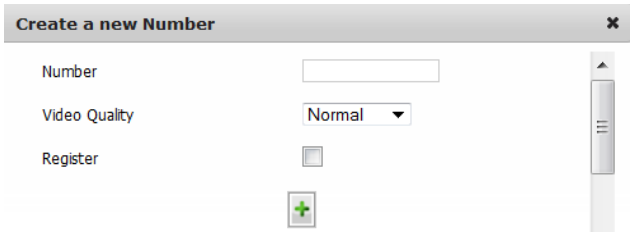

Figure 6: Create a New Number Window

3. In the **Number** field, type the new access number.

4. In the **Video Quality** field, select one of the following:

Voice Only
Normal: CIF (352X288)
High: VGA (640x480)
HD (1280x720)

5. Do one of the following:

To register the access number, continue with the next step.

To complete the configuration procedure, click **Save**.

6. To register the access number to the registrar, select **Register**.

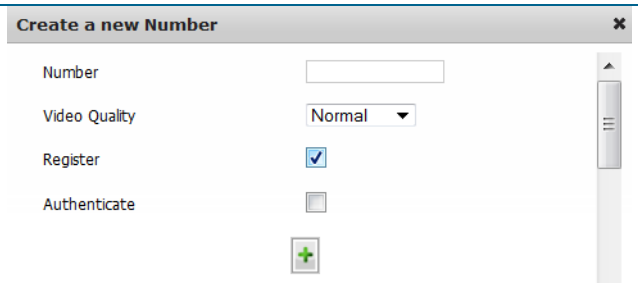

Figure 6: Registering a Number

The **Authenticate** option appears.

7. To authenticate the registration, select **Authenticate**.

The **Username** and **Password** options appear.

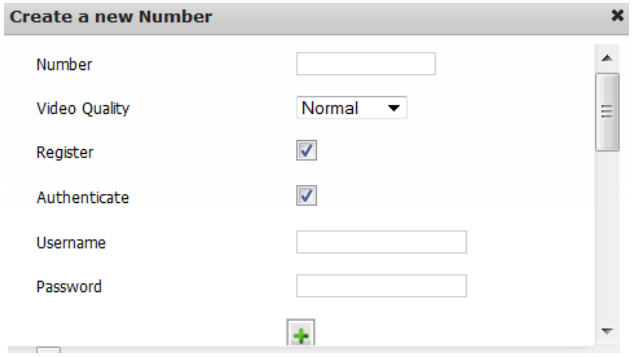

Figure 6: Authenticating a Number

8. Enter a **Username** and **Password**.

9. Click **Save** to save the configuration.

To edit the parameters of an existing access number:

1. In the **Access Numbers** window, click in the **Operations** column of the number to be edited. The **Edit Access Number** window opens.

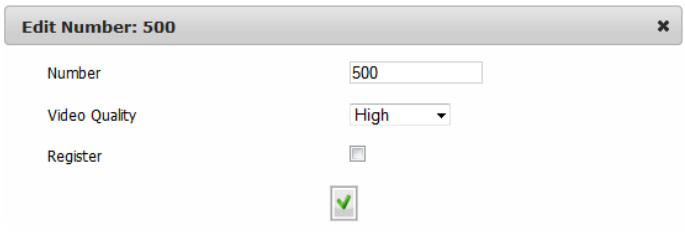

10. Modify the settings as needed and click **Save**.

To delete an access number from the list:

In the **Access Numbers** window, click in the **Operations** column of the number to be deleted.

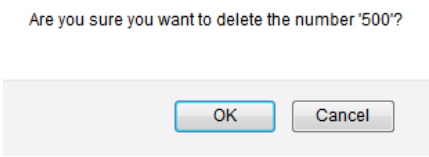

Date and Time

The date, time and time zone can be set manually, or an NTP server can be used to correct manual settings.

To set the date and time:

1. Select **System Settings** > **Date & Time**.

   The **Date & Time** window opens.

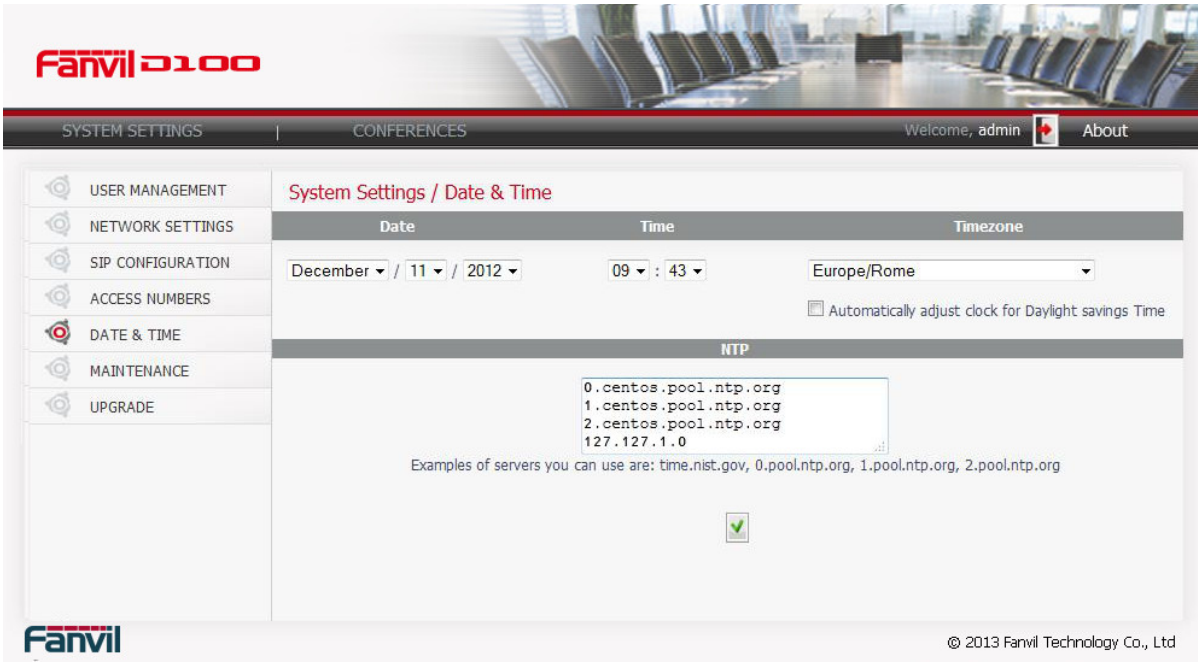

Figure 6: Date and Time Screen

11. Select the current **Date**.
12. Select the current **Time**.
13. Select the relevant **Timezone**.
14. To automatically adjust the time for daylight savings time, select **Automatically adjust clock for daylight savings time**.
15. To have an NTP server sync the Fanvil D100 with other devices on the network, select a server from the **NTP** list.
16. To add a new server, enter a new line to the server's list.

17. To delete an existing server, remove the line from the list.

    If more than one NTP server appears in the list, the first server in the list has the highest priority.

18. Click **Save** .

Maintenance

The following maintenance actions can be performed:

View System Status - Provides the status of system components, and general system information including CPU usage, free, and total memory.

Restart the Application - The software application restarts and all ongoing sessions are dropped.

Hardware Reset – Reboots hardware. This process is a longer process, taking around 3 minutes. It is recommended to log out and re-log into the system after a Hardware Reset.

Fanvil D100 Shutdown – Enables graceful system shut-down. When shut-down, the server will completely power off

Start Diagnostic Trace – System events are collected during a specified interval and saved, creating a trace file for advanced diagnostics. For more information, please refer to section Start Diagnostic Trace below.

To perform system maintenance:

1. Select **System Settings** > **Maintenance**. The Maintenance window opens.

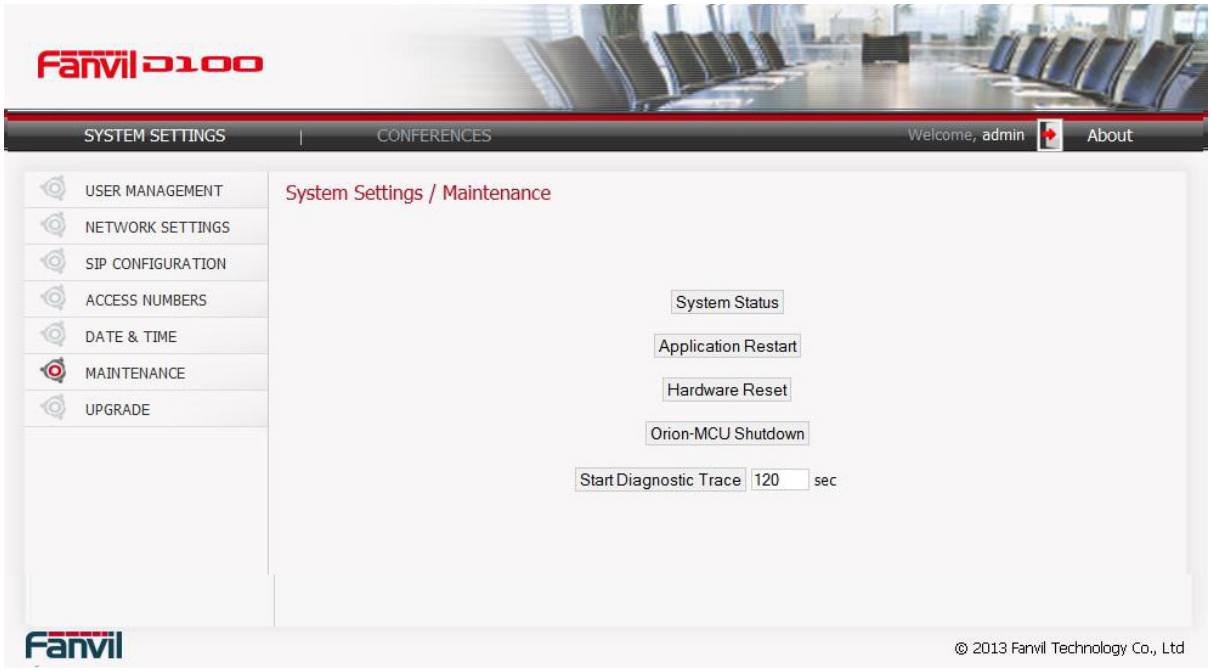

Figure 6: Maintenance Window

19. Click a button to perform the action specified.

For additional maintenance operations and troubleshooting, an emergency menu can be accessed using serial connectivity. For further information, see **chapter** 10, Serial Connectivity.

Start Diagnostic Trace

To provide diagnostic trace to FANVIL support stuff:

1. Select **System Settings** > **Maintenance**. The Maintenance window opens.

20. Click on **Start Diagnostic Trace**

21. Enter the interval for information collection in the text-box. The allowed range is between “0” to “300” seconds.

The system creates a package with the system configuration, log files in debug level and IP trace of all the system network interfaces for the duration of the diagnostic trace, If “0” is entered, the system will create a package with system configuratiuon and logs only.

22. A diagnostic file (zip file) is created. Click **Save Diagnostic Trace** to save the file.

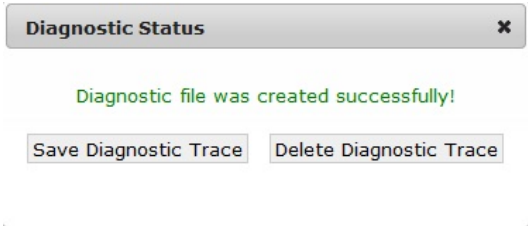

Figure 6: Diagnostic Dialog Box

23. After saving the file, **Delete Diagnostic Trace**, appears on the main **Maintenance** screen, allowing the user to delete the file.

Only one trace file is allowed. To provide a new trace file, the existing file must be deleted.

Upgrade

The system shall be upgraded as software upgrade becomes available.

To upgrade the system:

1. Select **System Settings** > **Upgrade**. The Upgrade window opens:

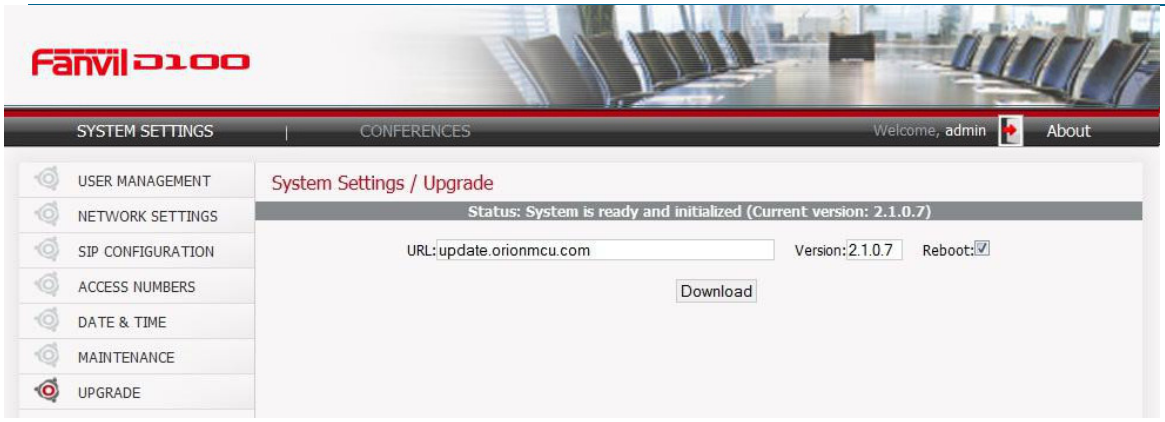

Figure 6: Upgrade Window

24. In the **URL** text-box, type the Fanvil D100's upgrade server's address: **update.D100mcu.com.** If **DNS** has not been set (**Network Settings** section Configuring Network Settings, use its IP address: **23.23.229.203**.

25. In **Version** text-box, enter the version number to be downloaded (will be supplied by FANVIL support, upon the release of a GA version).

26. After the upgrade is completed, the system must reboot. For an automatic reboot, select **Reboot**. Otherwise, after the upgrade's completion, the system shall reboot manually.

27. Click **Download**.

After the software download is completed, the **Start the Upgrade** button is displayed:

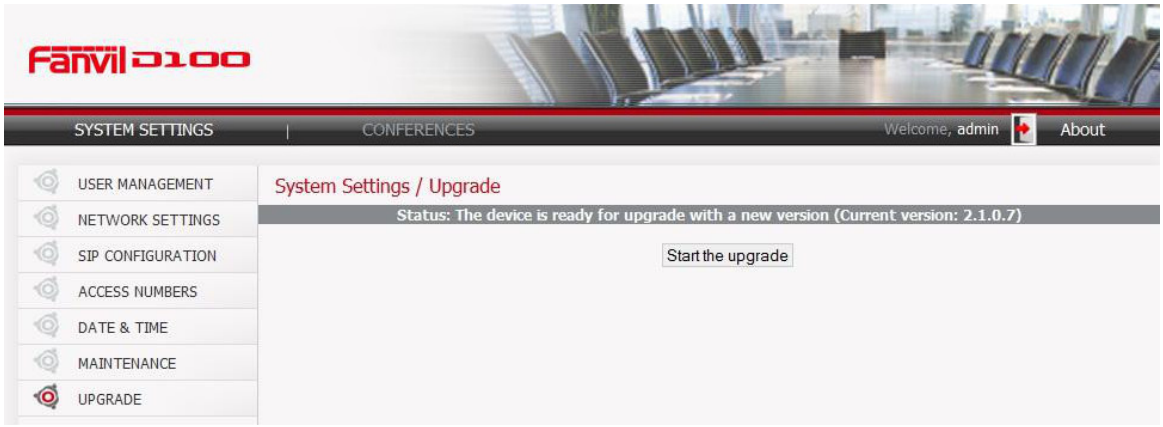

Figure 6: Starting the Upgrade Process

28. Click **Start the Upgrade**. The upgrade starts.

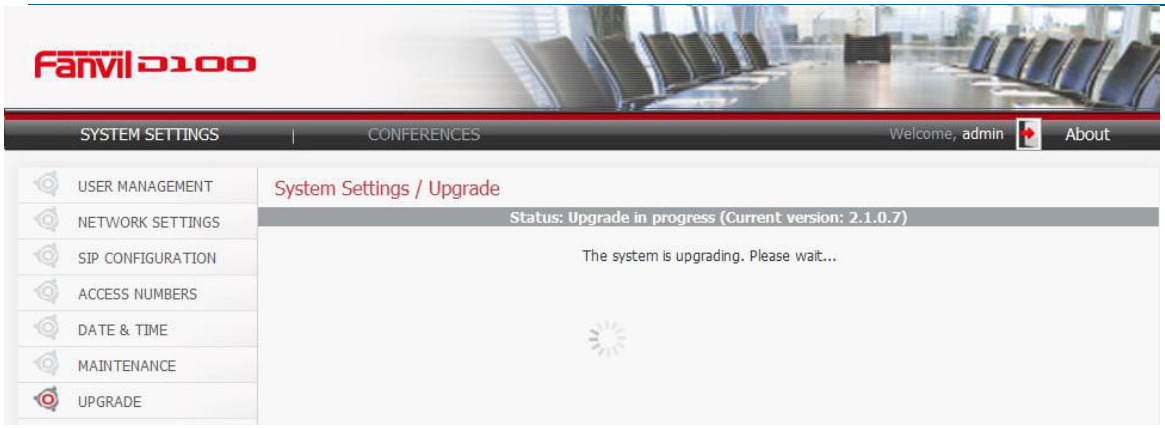

Figure 6: Upgrade Starting

29. Did you select the **Reboot** option before the software download?

If YES, then the system reboots automatically.

If NO, then click the **Reboot** button which appears after the upgrade is complete.

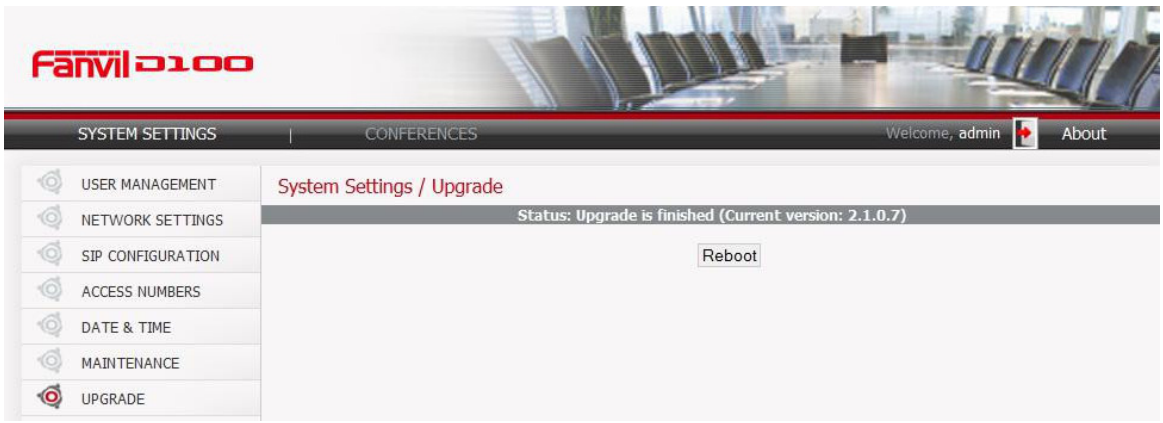

Figure 6: Reboot Confirmation

Conferences

After system parameters have been provisioned, conferences can be set up.

Summary

Select **Conferences > Summary** to view the list of the existing active conferences:

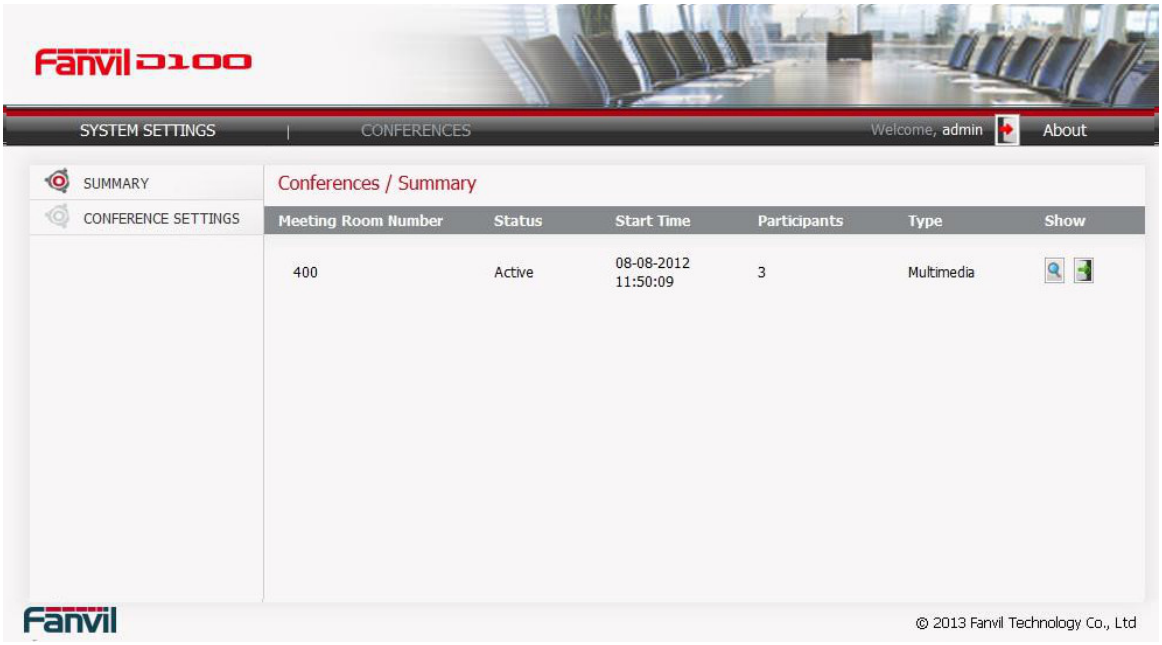

Figure 7: Conferences List

To see the details of a conference:

Click **View**.

Figure 7 details the selected conference information, including state, type and the list of participants including: telephone number, login time and role.

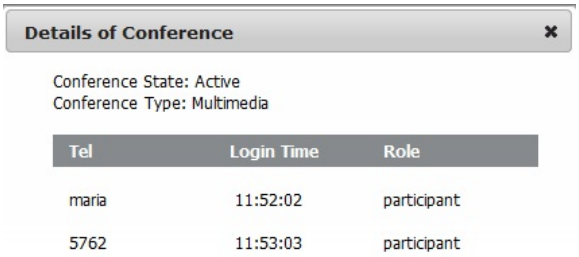

Figure 7: Conference Details

Click **Leader Dashboard**, to open the Leader Dashboard (section Leader Dashboardbelow), and manage a conference.

Conference Settings

The parameters of an existing conference can be viewed or modified and new conferences can be created.

Opening the Conference Settings Window

To open the Conference Settings window:

Select **Conferences** > **Conference Settings**.

The list of the existing conferences is displayed :

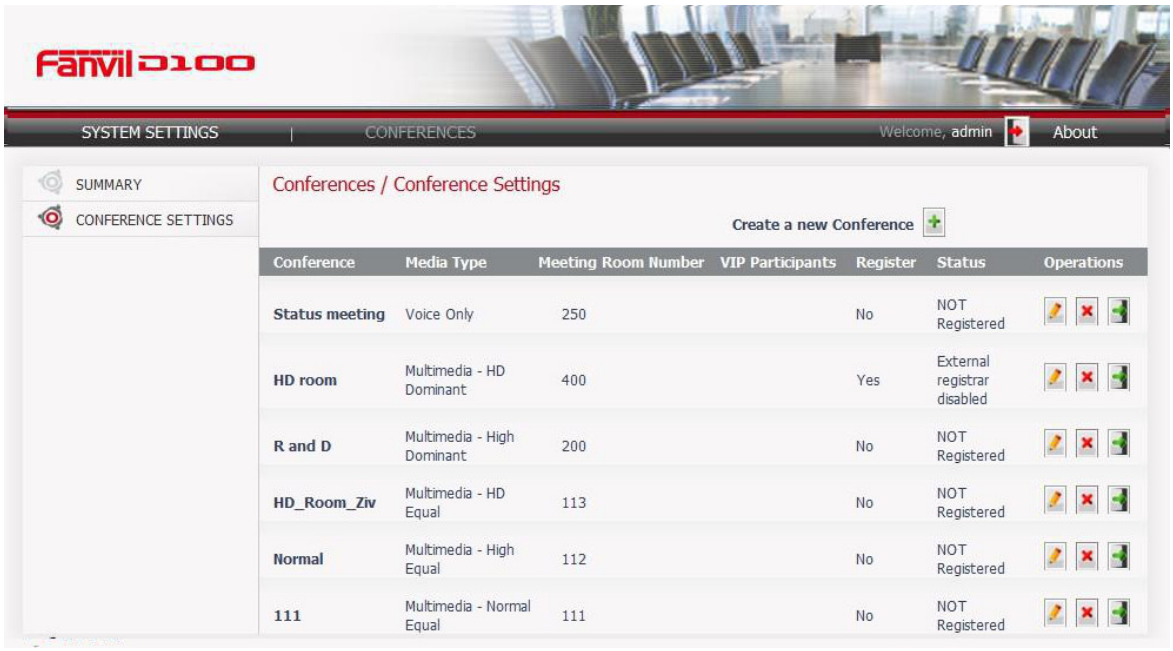

Figure 7: Conference Management

Note: The three parameters displayed in the **Media Type** column are as follows:

Multimedia/Voice

Video Quality: Normal: Voice Only, CIF (352X288) / High: VGA (640x480) / HD: (1280x720)

Dominant Based/Equal Presence

Creating a Conference

To create a new conference:

1. Click **Create a new Conference**.

   The **Create a new Conference** window opens.

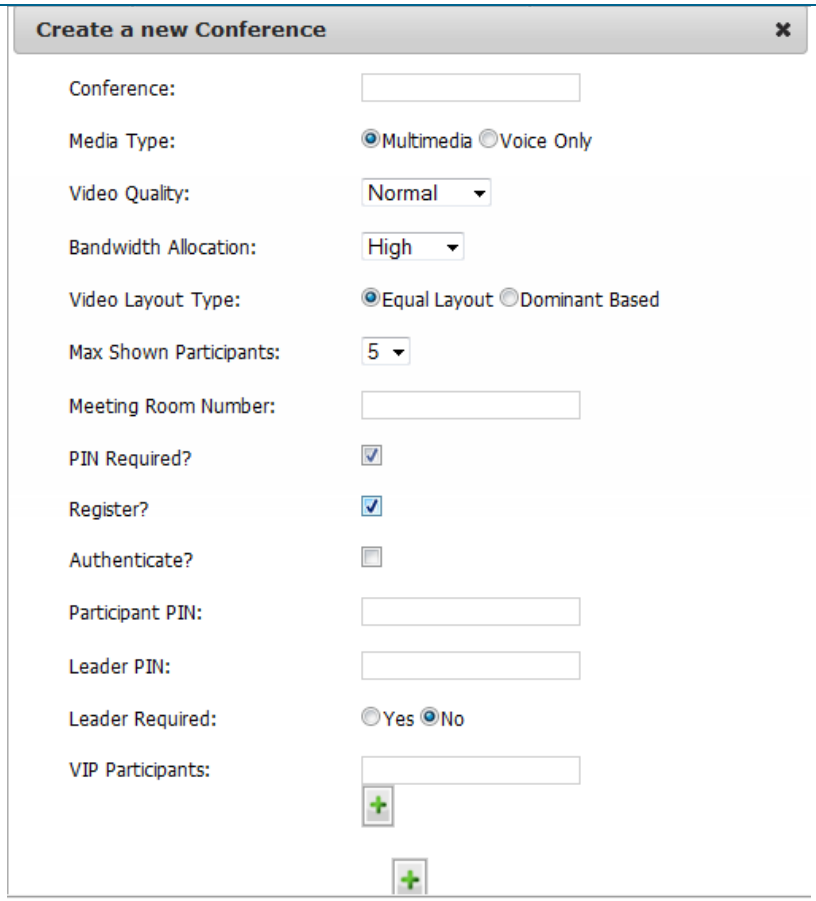

Figure 7: New Conference Details

30. Select conference parameters as described in section Conferencing Parameters, Conferencing Parameters.

31. Click **Save** , to save the entered information.

Other Conference Actions

You can edit conferences, delete conferences, and open the **Leader Dashboard** to manage a conference from the **Operations** column of the **Conference Settings** window.

To edit a conference:

Click **Edit**. Then edit conference parameters as described in Conferencing Parameters.

To delete a conference:

Click **Delete** .

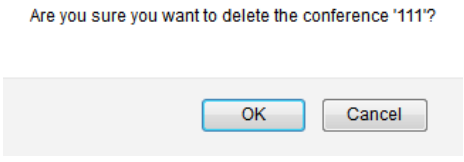

To manage a conference:

Click **Leader Dashboard**, to open the **Leader Dashboard**. See section Leader Dashboard Leader Dashboard.

Conferencing Parameters

Conferencing parameters are listed in the below table:

Parameter	Values	Remarks
Conference Name	String	The nickname of the conference
Media Type	Multimedia Voice Only	The type of conference to be defined, Multimedia for Video conference or Voice only for Voice conference.
Video Quality	Normal High HD Voice Only	The video quality of the conference Normal: CIF (352X288), High: VGA (640x480), HD: (1280x720), and Voice Only
Bandwidth Allocation	Low Medium High	FANVIL recommends using “Medium” as a default value, hence every new conference room’s “Bandwidth Allocation” parameter will be configured as “Medium”. If the bandwidth in the LAN or WAN, where the Fanvil D100 in deployed, is low, please set the conference room’s “Bandwidth Allocation” parameter to “Low”. If there are no bandwidth restrictions, you may use “High” for enhanced video quality.
Video Layout Type	Equal Layout Dominant Based	The type of the video conference layout.
Max Shown Participants	Number	Up to 16 shown participants for equal based layout or up to 8 shown participants for dominant based layout.
Meeting Room Number	Number	The meeting room (conference) can be accessed by direct dialing, if it is registered. Also used as username for the leader dashboard login.
PIN Required?	Yes/No	If positive, the participant is required to enter PIN number to log into the conference.
Register?	Yes/No	If positive then the conference is registered to the external registrar.
Authenticate?	Yes/No	If positive then the conference is registered with authentication.
Username	String	If authentication chosen, a username needs to be entered.
Password	String	If authentication chosen, password needs to be entered.
Participant PIN	Number	The participant PIN for logging into the conference

Parameter	Values	Remarks
Leader PIN	Number	The conference leader PIN (should be different from the participant PIN). Also used as password for the leader dashboard login.
Leader Required	Yes/No	Defines if the conference can start before the leader joins the conference or not, if configured yes all regular participant will be placed on hold until the leader joins to the conference.
VIP Participants	List of numbers	Participants' phone numbers or SIP URIs who can join the conference without entering a participant PIN codes.

Table 7: Conferencing Parameters

Content Sharing

SIP clients may originate content sharing at any time during a conference session. In this case the conference layout is modified to one large image, which contains the content.

When the presentation is finalized, the system returns to the original layout.

Currently, content sharing works only with AVer Room system. To start the content sharing, the user should press the **Present** button on AVer's remote control or share his screen using AVer ScreenShare software.

Dialing Options

In order to join a conference from a video room system, phone or a softclient, the user can use the access number or the conference number. The following tables show various dialing options per each choice, using the below numbers:

Access Number – 500

Conference Number – 100

Participant PIN Code – 1

Fanvil D100 Domain – D100.com (Domain name or IP address).

Participant is registered on PBX:

Dialing Option	PIN Code	Operations and Prompts
Access Number	√	Dial 500 – Prompt: *"Please enter your conference number followed by the # key"* Dial 100 – Prompt: *"Please enter the conference PIN number followed by the # key"* Dial 1 – Connected to conference
Conference Number	√	Dial 100 – Prompt *"Please enter the conference PIN number followed by the # key"* Dial 1 – Connected to conference
Access Number		Dial 500 – Prompt *"Please enter your conference number followed by the # key"* Dial 100 – Connected to conference
Conference Number		Dial 100 – Connected to conference

Table 7: Dialing Information - Registered on PBX

Participant is registered on Fanvil D100 SIP Build-in Registrar:

Dialing Option	PIN Code	Operations and Prompts
Access Number	√	Dial 500 – Prompt "*Please enter your conference number followed by the # key*" Dial 100 – Prompt "*Please enter the conference PIN number followed by the # key*" Dial 1 – Connected to conference **Alternative option (Connecting without prompts):** Dial 500*100*1 – Connected to conference
Conference Number	√	Dial 100 – Prompt "*Please enter the conference PIN number followed by the # key*" Dial 1 – Connected to conference
Access Number		Dial 500 – Prompt "*Please enter your conference number followed by the # key*" Dial 100 – Connected to conference
Conference Number		Dial 100 – Connected to conference

Table 7: Dialing Information - Registered on Fanvil D100

Participant is not registered:

Dialing Option	PIN Code	Operations and Prompts
Access Number	√	Dial 500@D100.com – Prompt "*Please enter your conference number followed by the # key*" Dial 100 – Prompt "*Please enter the conference PIN number followed by the # key*" Dial 1 – Connected to conference **Alternative option (Connecting without prompts):** Dial 500*100*1@D100.com – Connected to conference
Conference Number	√	Dial 100@D100.com – Prompt "*Please enter the conference PIN number followed by the # key*" Dial 1 – Connected to conference
Access Number		Dial 500@D100.com – Prompt "*Please enter your conference number followed by the # key*" Dial 100 – Connected to conference
Conference Number		Dial 100@D100.com – Connected to conference

Table 7: Dialing Information - Not Registered

Leader Dashboard

Leader's Capabilities

The Leader Dashboard provides the following capabilities to the conference leader:

- Invite participants to join the conference
- Modify the status of the participant from dominant to non dominant and vice versa
- Make a participant visible/invisible
- Obtain call statistics
- Mute/Unmute all participants
- View detailed conference parameters
- Remove participants from the conference
- Modify the conference layout mode.

Leader Login

The leader logs into the Leader Dashboard by using the conference number as username and the leader PIN code as password, as shown below in Error: Reference source not found:

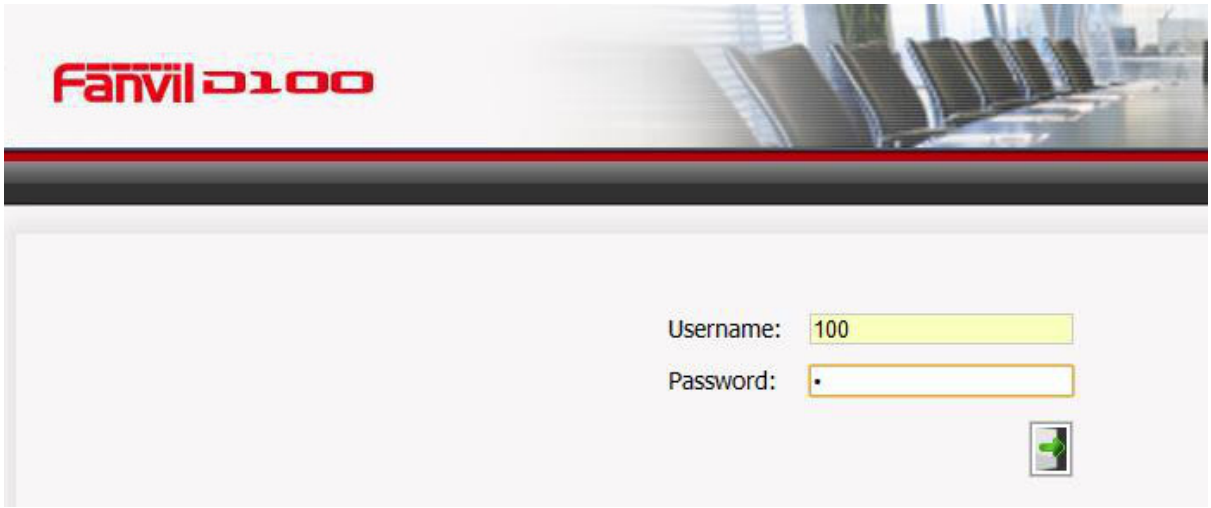

Figure 8: Leader Login

Main Screen

Figure 8 below shows the **Leader Dashboard**'s main window:

Figure 8: Leader Dashboard Main Window

On the main screen of the leader dashboard, the following items are displayed:

- **Meeting Information** – Meeting information includes conference and access numbers.
- **Total Bandwidth** - Total bandwidth usage of incoming and outgoing sessions, updated every 5 seconds - displayed at the top of the toolbar.
- **Operational Buttons –** The following operational buttons appear at the left side of the Leader Dashboard window:

Invite Participants – Enables the leader to invite participants to join the conference.

Mute/Unmute All Participants

Show Statistics – Displays the conference's detailed statistics information (section below).

- Toolbar which includes **Participants** and **Layout** options (section Leader Dashboard). **Participants** screen provides the default display of the main screen.
- The list of the conference participants followed by icons - Each participant in the list is followed by icons. Each icon represents an information about the participant's state or /and enables the user to toggle between the states, by clicking on it.

The icons and the state they represent are listed in Figure 8 below:

Dominant participant	**Participant (not Dominant)**	
Call statistics		
Participant voice enabled	**Video only conference**	**Participant voice muted**
Visible, participant	**Voice only participant**	**Participant video disabled**
Remove participant		

Figure 8: Leader Dashboard Icons

Figure 8 shows a participant's call statistics information, appears upon clicking on :

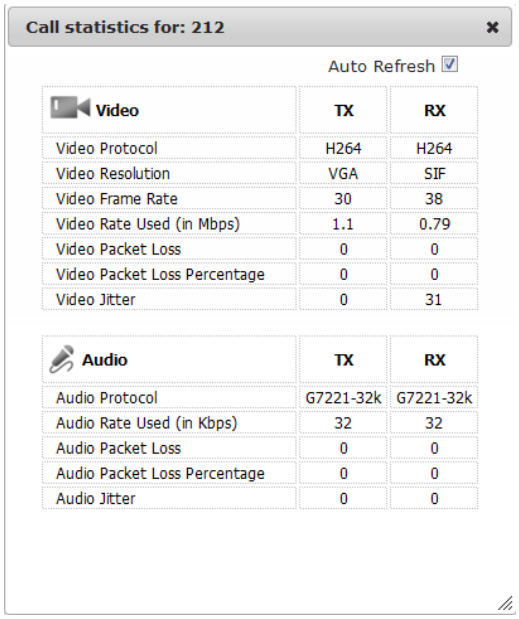

Figure 8: Call Statistics

Layouts

To set the conference layout mode, click the **Layouts** tab on the main leader dashboard screen. Figure 8, shows the current and the possible layouts:

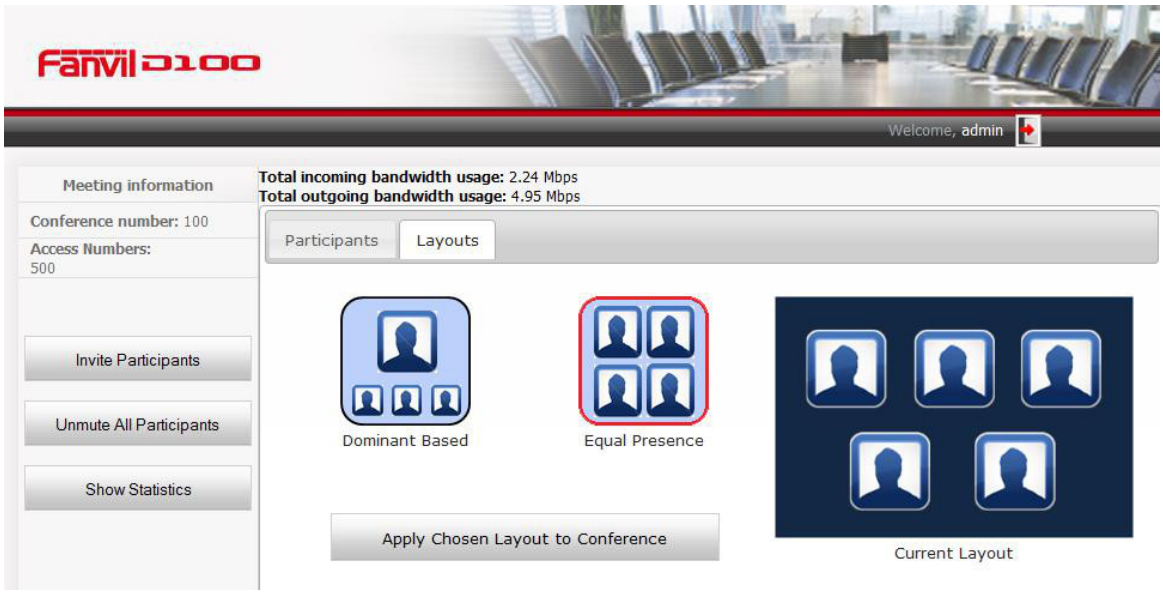

Figure 8: Conference Layouts

One of two layouts can be chosen:

Dominant based: The dominant speaker's image is larger than the other participants' images (The dominant speaker is automatically defined by energetic voice detection).

Equal Presence: All the images are displayed equally.

The red border shows the chosen layout. Click **Apply Chosen Layout to Conference** to select a layout.

Show Statistics

To view the conference statistics details, click the **Show Statistics** button on the left side of the leader dashboard screen. Figure 8 showing the statistics information of all the conference participants:

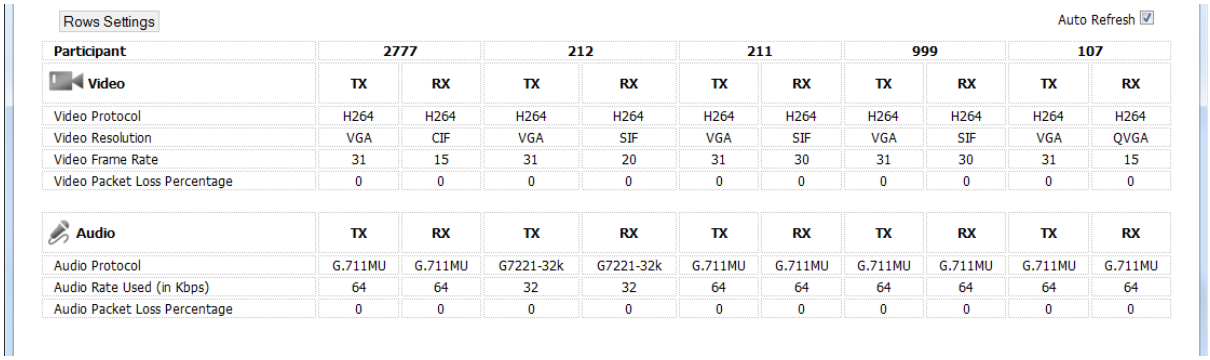

Participant	2777		212		211		999		107	
Video	TX	RX	TX	RX	TX	RX	TX	RX	TX	RX
Video Protocol	H264	H264	H264	H264	H264	H264	H264	H264	H264	H264
Video Resolution	VGA	CIF	VGA	SIF	VGA	SIF	VGA	SIF	VGA	QVGA
Video Frame Rate	31	15	31	20	31	30	31	30	31	15
Video Packet Loss Percentage	0	0	0	0	0	0	0	0	0	0
Audio	TX	RX	TX	RX	TX	RX	TX	RX	TX	RX
Audio Protocol	G.711MU	G.711MU	G7221-32k	G7221-32k	G.711MU	G.711MU	G.711MU	G.711MU	G.711MU	G.711MU
Audio Rate Used (in Kbps)	64	64	32	32	64	64	64	64	64	64
Audio Packet Loss Percentage	0	0	0	0	0	0	0	0	0	0

Figure 8: Conference Statistics

Use the horizontal scroll bar to view all the participan's information.

Set the **Auto Refresh** check-box to update the displayed information automatically. The information is updated every 5 seconds.

The rows in the statistics table above can be set or reset by clicking on the **Rows Settings** button. As shows in Figure 8:

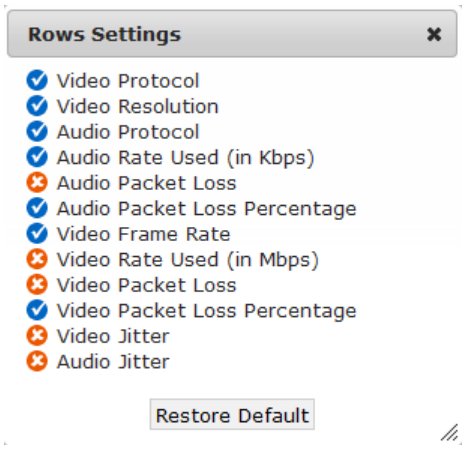

Figure 8: Rows Settings

Click on **Restore Default** to restore the original rows settings.

Invite Participants

To invite participants to join a conference:

1. Click the **Invite Participants** button.

   The **Invite Participants** window opens as shows in Figure 8:

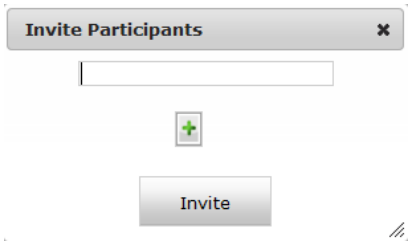

Figure 8: Inviting Participants

2. You can enter one of the following:

a) **For registered participant**: Enter the name/number appears in the registration to SIP registrar

b) **For non-registered participant**: Enter the full path including the SIP server IP address: name/number@SIP server-IP-Address

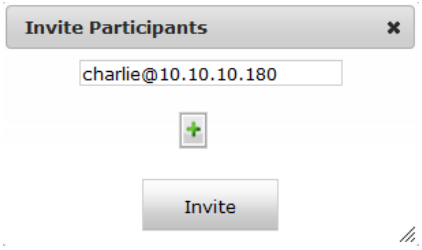

3. Click to add more participants and then click **Invite**.

Firewall and NAT

Overview

Fanvil D100 provides voice and video conferencing services for SMBs and enterprises, and is naturally located either in a demilitarized zone (DMZ) with a public or private IP address or in a LAN behind the organization's Firewall/NAT (Network Address Translation) with a private IP address. The Fanvil D100 may also reside in a public IP.

Firewalls that are not SIP aware may cause complexity in providing connectivity with clients, located in the external IP network or behind other firewalls.

This section describes the possible topologies, firewall/NAT settings, and NAT traversal in Fanvil D100.

Topologies

Fanvil D100 in a DMZ

When Fanvil D100 is located in the DMZ, it allows you to assign to it a public or private IP address. This enables an easy access and direct connectivity with video clients in the public internet as shown below in Error: Reference source not found:

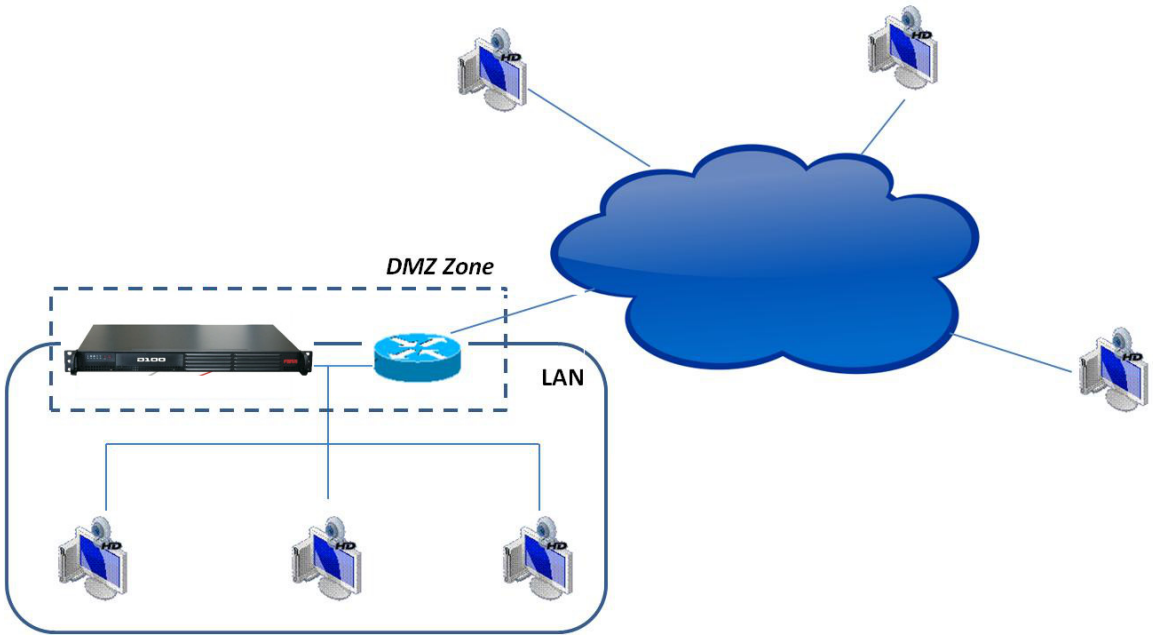

Figure 9: Fanvil D100 in DMZ Zone

Fanvil D100 behind a NAT

When Fanvil D100 system is located behind a NAT, in a private LAN, it is not accessed directly by the other entities in the internet. This causes a better security on one hand and on the other hand it makes the connectivity with outside world more complicated. When deploying the Fanvil D100 in this topology, it is required to provide port mapping to the Fanvil D100. As shown below in Error: Reference source not found:

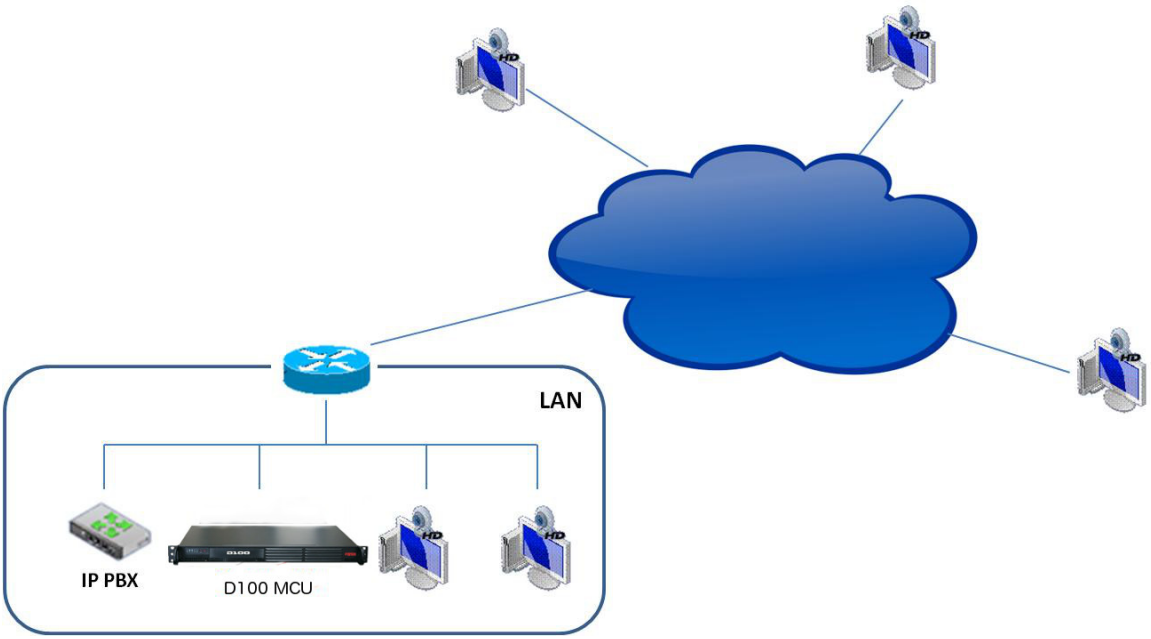

Figure 9: Fanvil D100 Located in LAN

Firewall/NAT Settings

In order to use a firewall/NAT, it is recommended to follow the below settings:

Blocking Ports

Block the access, from the external IP network, to the following ports:

- 22 (ssh)
- 23 (telnet)
- 80 (http)
- 443 (https)

You may let them remain open for internal administrative operations.

Enabling SIP Sessions

To enable SIP setup with other entities in the external network, the firewall/NAT router must be configured to allow incoming and outgoing SIP messages through UDP port 5060 and 5093 (for SIP session signaling) and TCP port 5061 (for TLS).

RTP Traffic Ports Range

The range of the UDP ports for the incoming and outgoing RTP packets need to remain open in the firewall/NAT. Fanvil D100 communicates through ports in the range 10000-20000, for video, voice and content sharing.

The actual range can be restricted within the default one, depending on number of conferences, participants per conference, conference type and Fanvil D100's model you are using.

NAT Traversal in Fanvil D100

Near-End NAT Traversal

In a deployment scenario where Fanvil D100 is located behind a firewall and is configured with private IP address, the signaling sent from the Fanvil D100 messeges will contain private IP addresses. Unless the firewall provides VoIP NAT Traversal services, sessions will not connect, as the singling messeges will contain non-routable addresses. This issue is called Near-End NAT traversal, as the problem to be solved is "near" – meaning the close firewall.

Fanvil D100 solves this problem by providing near-end NAT traversal as part of the Fanvil D100. The private IP addresses within the SDP are replaced by the NAT's public IP address and the clients receive SIP messages which include SDP with accessible public IP addresses, providing session completion.

Fanvil D100 Setting for Near-End NAT Traversal

In order to allow near-end NAT Traversal in Fanvil D100, follow the below steps:

1. Select **System Settings > SIP Configuration**. The below screen opens:

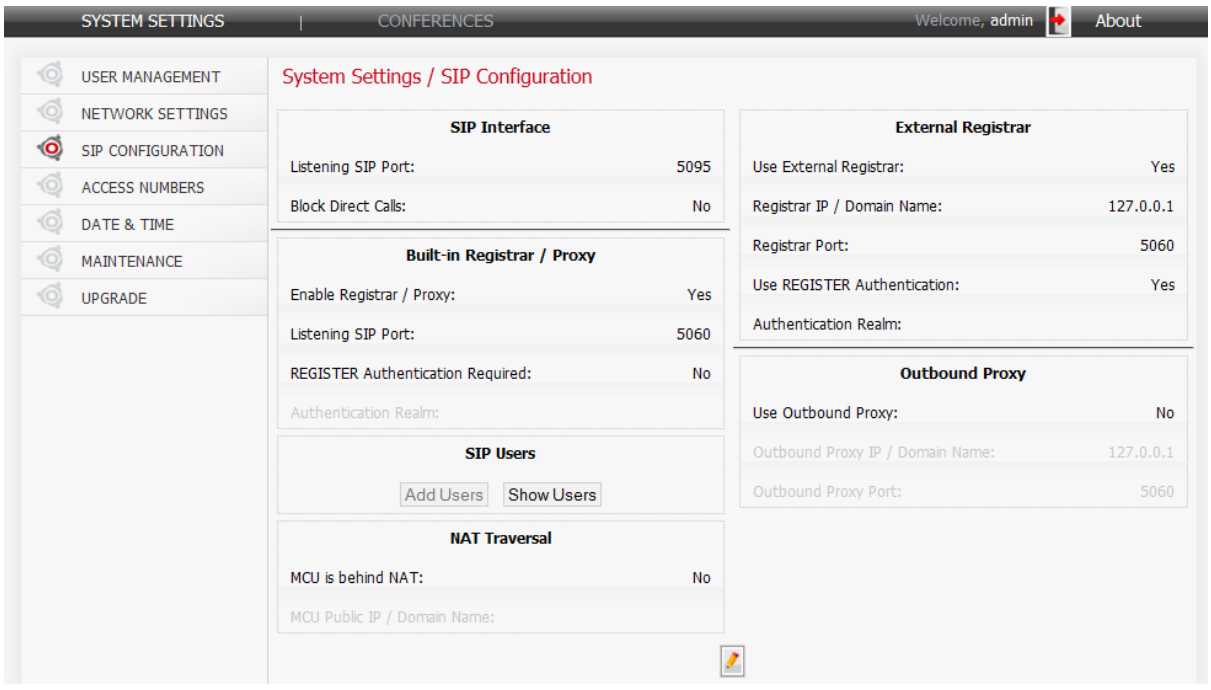

Figure 9: SIP Public IP Configuration

1. Click **Edit**. SIP settings become editable.
2. Check the **Enable Registrar / Proxy** check-box.
3. Enter a value for **Listening SIP Port.**
4. Check the **MCU is behind NAT** check-box.

32. Enter a value for **MCU Public IP / Domain Name**:

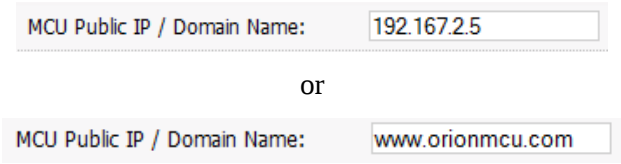

33. Press **Save** to save the configuration.

34. The system restarts. If **Domain Name** has been entered, the address is resolved.

35. Near-end NAT traversal is applied.

Far-End NAT Traversal

When the SIP client is behind a firewall, Fanvil D100 may receive private IP addresses in the received SDP (for sending the session's RTP packets) as shown below in Error: Reference source not found:

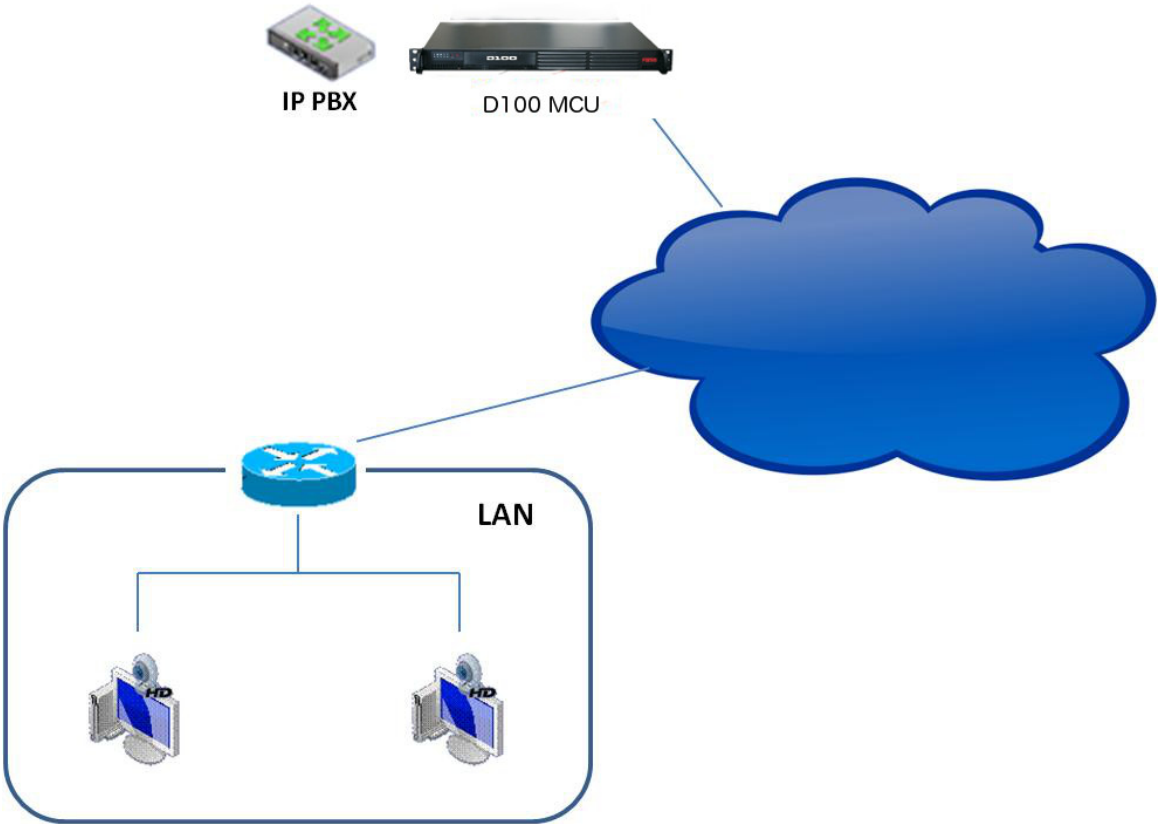

Figure 9: SIP Client behind a NAT

In this case, the packets cannot be sent, until the first packets are received from the client. The system learns the actual public IP address of these packets, and sends the transmitted RTP packets to this address.

Far-end NAT traversal is applied automatically and no setting is needed in Fanvil D100.

Note: Please note that in order for this topology to work, the SIP clients located behind the local firewall must support Near-End NAT traversal.

Near End NAT Traversal for SIP Clients requires the SIP clients to send their routable (in most cases Public) IP address in their contact information and r-port parameter.

Serial Connectivity

If there is no communication with the system for any reason, the Fanvil D100 can be accessed by the serial I/O port for a basic troubleshooting. Follow these steps to enable serial communication.

Step 1: Physical Connectivity

Connect the serial port of your laptop to the Fanvil D100 serial port. If no serial I/O port is available on your computer, use a USB adaptor.

Step 2: Login

Use any Telnet software, for example "PuTTy", to reach the login prompt of the system:

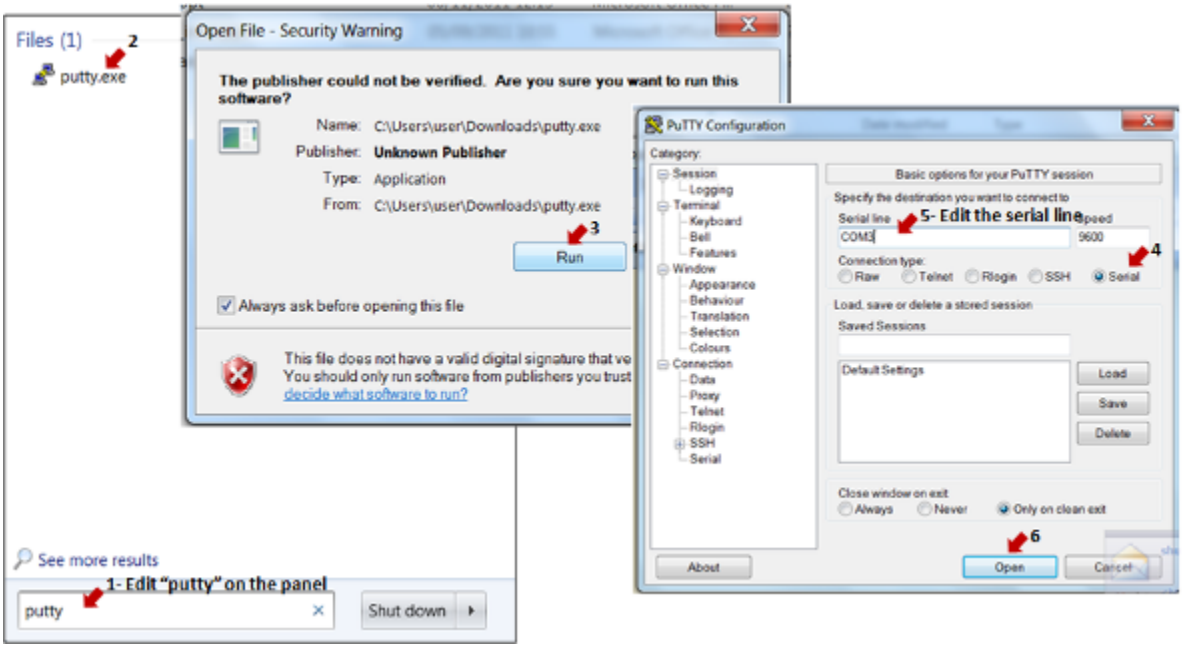

Figure 10: System Login

Step 3: Emergency menu

Enter the default user name and password (admin, admin) to view the emergency menu. Use the arrow keys and <Enter> to make your selection from the following options:

1. Show the IP address of the system

36. Set a default IP address

37. Reset the password

38. Reboot the system

39. Logout

Appendix-A: Precautions & Safety

Rack Precautions

Ensure that the leveling jacks on the bottom of the rack are fully extended to the floor with the full weight of the rack resting on them.

In a single rack installation, stabilizers should be attached to the rack.

In multiple rack installations, the racks should be coupled together.

Always make sure the rack is stable before extracting a component from the rack.

Extract only one component at a time - extracting two or more simultaneously may cause the rack to become unstable.

Server Precautions

Review the electrical and general safety precautions.

Determine the placement of each component in the rack before you install the rails.

Install the heaviest server components at the bottom of the rack first, and then work up.

Use a regulating, uninterruptible power supply (UPS) to protect the Fanvil D100 from power surges, voltage spikes and to keep your system operating in case of a power failure.

To maintain proper cooling, always keep the rack's front door and all panels and components on the components closed when not servicing.

System Safety

Electrical Safety Precautions

Basic electrical safety precautions should be followed to protect yourself from harm and the Fanvil D100 from damage:

Be aware of the locations of the power on/off switch on the chassis as well as the room's emergency power-off switch, disconnection switch or electrical outlet. If an electrical accident occurs, you can then quickly remove power from the system.

Do not work alone when working with high voltage components.

Power should always be disconnected from the system when removing or installing main system components. When disconnecting power, you should first shut down the system and then unplug the power cords.

When working around exposed electrical circuits, another person who is familiar with the power-off controls should be nearby to switch off the power if necessary.

Use only one hand when working with powered-on electrical equipment. This is to avoid making a complete circuit, which will cause electrical shock. Use extreme caution when using metal tools, which can easily damage any electrical components or circuit boards they come into contact with.

Do not use mats designed to decrease static electrical discharge as protection from electrical shock. Instead, use rubber mats that have been specifically designed as electrical insulators.

The power supply power cords must include a grounding plug and must be plugged into grounded electrical outlets.

General Safety Precautions

Follow these rules to ensure general safety:

Keep the area around the system clean and free of clutter.

The system weighs approximately 10 lbs (4.5 kg).

Place the chassis top cover and any system components that have been removed, away from the system or on a table so that they won't accidentally be stepped on.

After accessing the inside of the system, close the system back up and secure it to the rack unit with the retention screws, after ensuring that all connections have been made.

Appendix-B- Rack Mounting

The box your chassis was shipped in should include four mounting screws, which you will need if you intend to install the system into a rack.

Choosing a Setup Location

Leave enough clearance in front of the rack to enable you to open the front door completely (~25 inches).

Leave approximately 30 inches of clearance in the back of the rack to allow for sufficient airflow and ease of servicing.

This product is for installation only in a Restricted Access Location (dedicated equipment room, service closet, etc.).

Rack Mounting Considerations

Ambient Operating Temperature: If installed in a closed or multi-unit rack assembly, the ambient operating temperature of the rack environment may be greater than the ambient temperature of the room. Therefore, consideration should be given to installing the equipment in an environment compatible with the manufacturer's maximum rated ambient temperature (Tmra).

Reduced Airflow: Equipment should be mounted into a rack so that the amount of airflow required for safe operation is not compromised.

Mechanical Loading: Equipment should be mounted into a rack so that a hazardous condition does not arise due to uneven mechanical loading.

Circuit Overloading: Consideration should be given to the connection of the equipment to the power supply circuitry and the effect that any possible overloading of circuits might have on over current protection and power supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.

Reliable Ground: A reliable ground must be maintained at all times. To ensure this, the rack itself should be grounded. Particular attention should be given to power supply connections other than the direct connections to the branch circuit (i.e. the use of power strips, etc.).

Rack Mounting Instructions

This section provides information about installing the Fanvil D100 into a rack unit. There are a variety of rack units on the market, which may mean the assembly procedure will differ slightly. You should also refer to the installation instructions that came with the rack unit you are using.

Installing the Chassis into a Rack:

Confirm that chassis includes the four mounting screws required to mount the chassis into a rack

Align the thru holes of the chassis with the thru holes of the rack.

Insert the mounting screws into the thru holes in the front of the chassis and through the thru holes in the rack

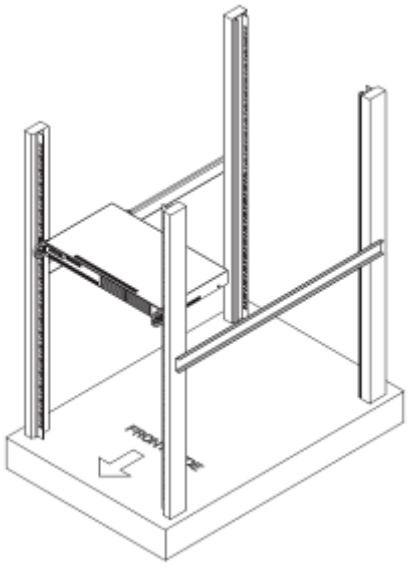

Figure 12- Installing Fanvil D100 into a Rack

Installing into a Telco Rack

The compact design of the Fanvil D100 enables installation into a Telco rack without the use of rails. The installation instructions are similar to the regular rack instructions.

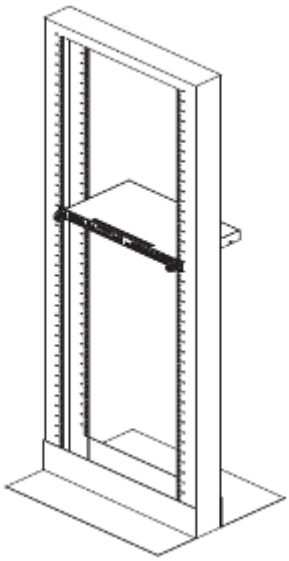

Figure 12- Installing Fanvil D100 into a Telco Rack

Appendix C- Technical Specification

Dimensions: 9 x 7.5 in (229 x 191 mm)

Chassis: 1U Rackmountable

Weight: Gross Weight: 10 lbs. (4.5 kg.)

System Input Requirements

AC Input Voltage: 100-240 VAC (auto-range)

Rated Input Current: 3A max.

Rated Input Frequency: 50 to 60 Hz

Power Supply

Rated Output Power: 200W (Part# PWS-202-1H)

Rated Output Voltages: +3.3V (8A), +5V (8A), +12V (16A), -12V (0.5A), +5Vsb (2A)

Operating Environment

Operating Temperature: 10º to 35º C (50º to 95º F)

Non-operating Temperature: -40º to 70º C (-40º to 158º F)

Operating Relative Humidity: 8% to 90% (non-condensing)

Non-operating Relative Humidity: 5 to 95% (non-condensing)

Web-based GUI

Fanvil D100 web based GUI supports Internet Explorer 8 or newer, Google Chrome 20 or newer, Mozilla Firefox 14 or newer and Safari 5 or newer.

End of Document